

ME74 User Manual



Table of Contents

About the Guide	4
Getting Started	5
Unpacking	5
Device Features	6
Keypads Introduction	9
Setting Up the Device	13
Installation Guide	13
Caution on Battery Charging	14
Charging Method	14
Using the Device	17
Home Screen	17
Setting Home Screen Rotation	17
Status Bar	18
Notification Icons	19
Status Icons	19
Managing Notifications	20
Opening the Quick Access Panel	21
Quick Access Panel Icons	21
Battery Management	22
Checking Battery Status	22
Monitoring Battery Usage	23
Low Battery Notification	23
Waking the Device	23
USB Communication	24
Enable USB Debugging	24
Transferring Files	26
Transferring Photos	27
Charging Mode	28
Disconnecting from the PC	28
Power Off	29
Restart	30
Task Manager	31
About Device	31
Upgrading	32
Settings	33
Accessing Settings	33
Display Settings	34
General Sound Setting	37
System Settings	38
Notifications	41

Setting App Notifications	41
Controlling Lock Screen Notifications	43
Applications	44
Installed Applications	44
Accessing Apps	45
Switching Between Recent Apps	46
Key Mapping	46
Manage key Mappings	49
Data Capture	50
Scan engine	50
Scan Settings	50
Reader Params	56
Data Format	57
Symbology settings	58
Reset	59
Import config/Export config	59
Wireless	60
Connect to WLAN	60
WWAN	63
Bluetooth	65
Change Bluetooth Device Name	66
Bluetooth Connection	67
Management Paired Devices	67
Connection Preferences	68
Accessories	69
List of Standard Accessories	69
List of Optional Accessories	70
Maintenance and Troubleshooting	74
Maintenance	74
ME74 Cleaning	74
Troubleshooting	75

About the Guide

Introduction

This Guide offers information on usage of ME74 mobile computer and its accessories.

Note: The screens and windows described in this Guide are samples, which can differ from actual ones.

Determining the Serial Number

Before contacting Customer Support, determine the serial number of your device.

Touch **Settings** > **About phone** > **Phone SN**.

Determining Software Versions

Before contacting Customer Support, determine the current software version on your device.

1. Touch **Settings** > **About phone**.
2. Scroll to view the following information:

- Device name
- Phone number (sim slot 1)
- Phone number (sim slot 2)
- Legal information
- SIM status (sim slot 1)
- SIM status (sim slot 2)
- Model
- Phone SN
- IMEI (sim slot 1)
- IMEI (sim slot 2)
- Android version
- Wi-Fi MAC address
- Bluetooth address
- Build number

Service information

If you have a problem with your equipment, contact Customer Support for your region. Contact information is available at: www.meferi.com.

When contacting support, please have the following information available:

- Device SN (Phone SN) (found on manufacturing label)
- Model number or product name (found on manufacturing label)
- Software type and version number

Customer Support responds to calls by email or telephone within the time limits set forth in support agreements.

Getting Started

Introduction

This chapter describes product information and instruction of device for the first time.

Unpacking

To unpack the device:

1. Carefully remove all protective material from the device and save the shipping container for later storage and shipping.
2. Verify that the following items were received:

ME74 Device×1

Battery×1

Power Adapter×1

USB cable×1


Hand Strap×1

Quick start guide×1


3. Inspect the equipment for damage. If any equipment is missing or damaged, contact customer support center immediately.
4. Please remove the screen shipping protective film before using.

Device Features


Front View

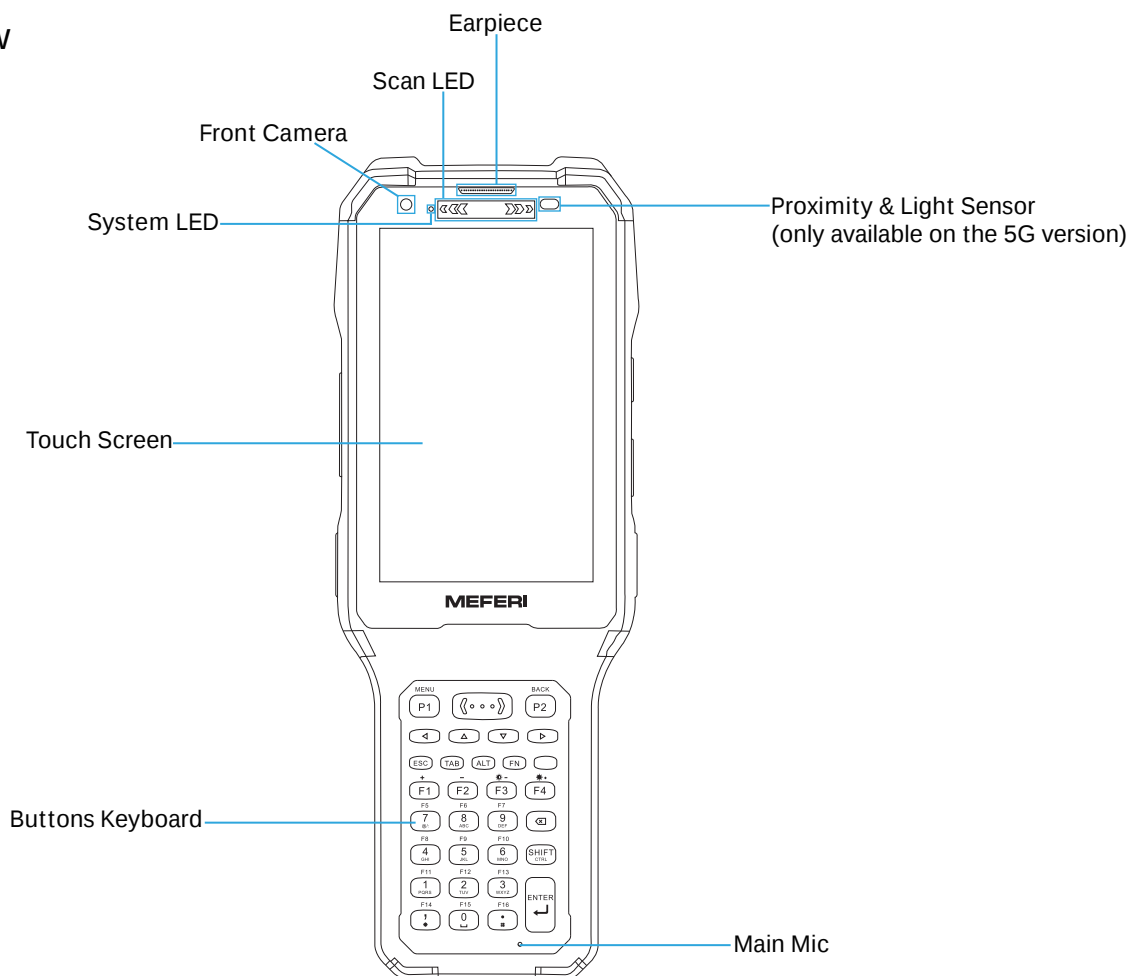

Side View

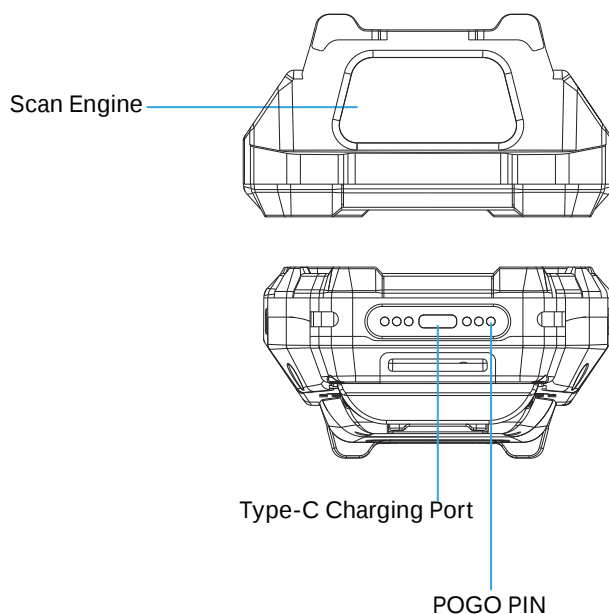


Rear View

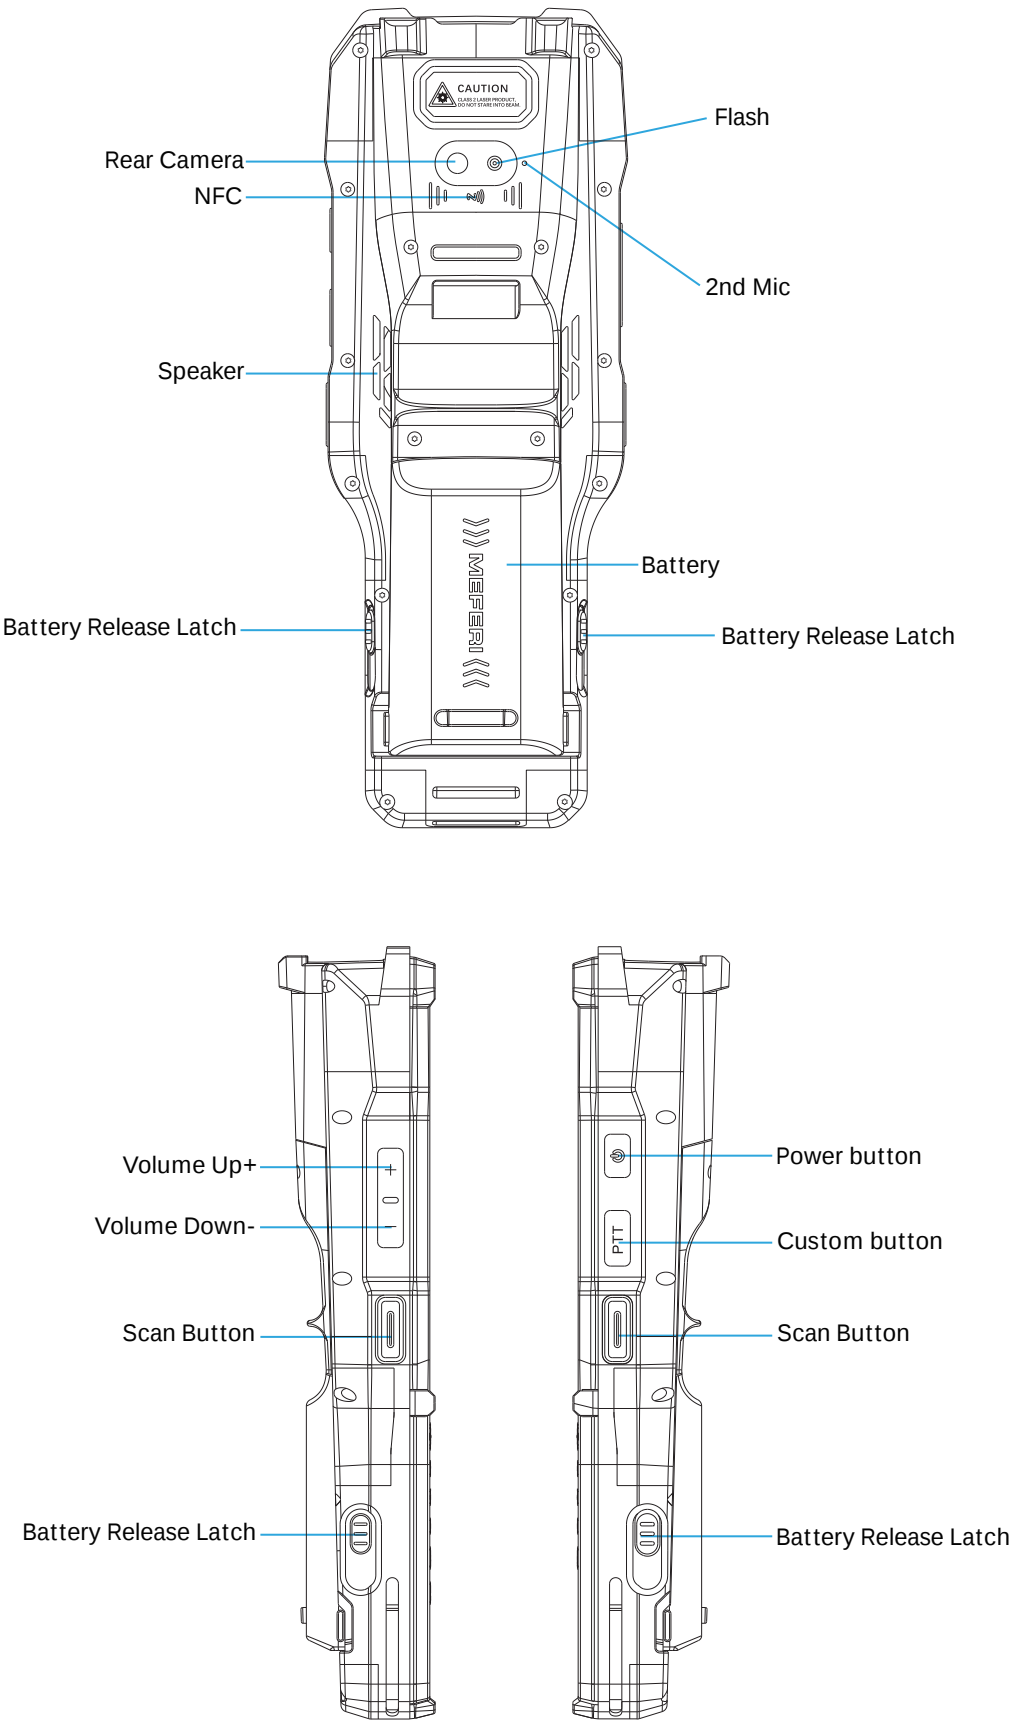


Device Features


Front View

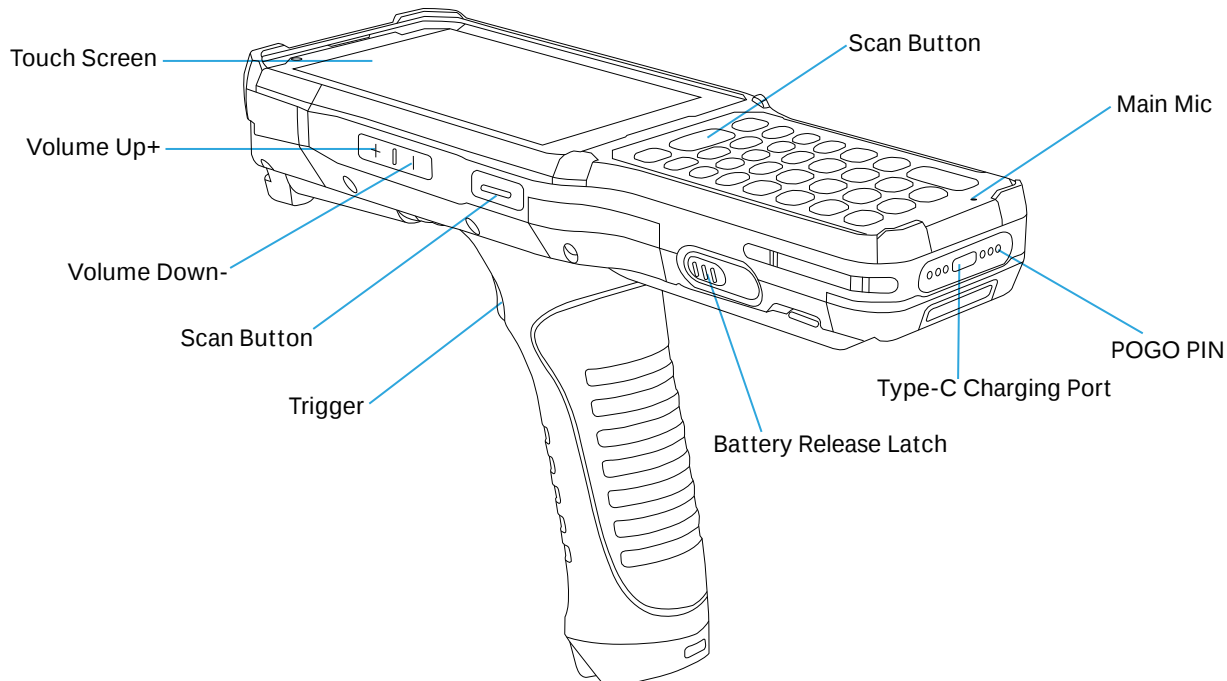


Rear View

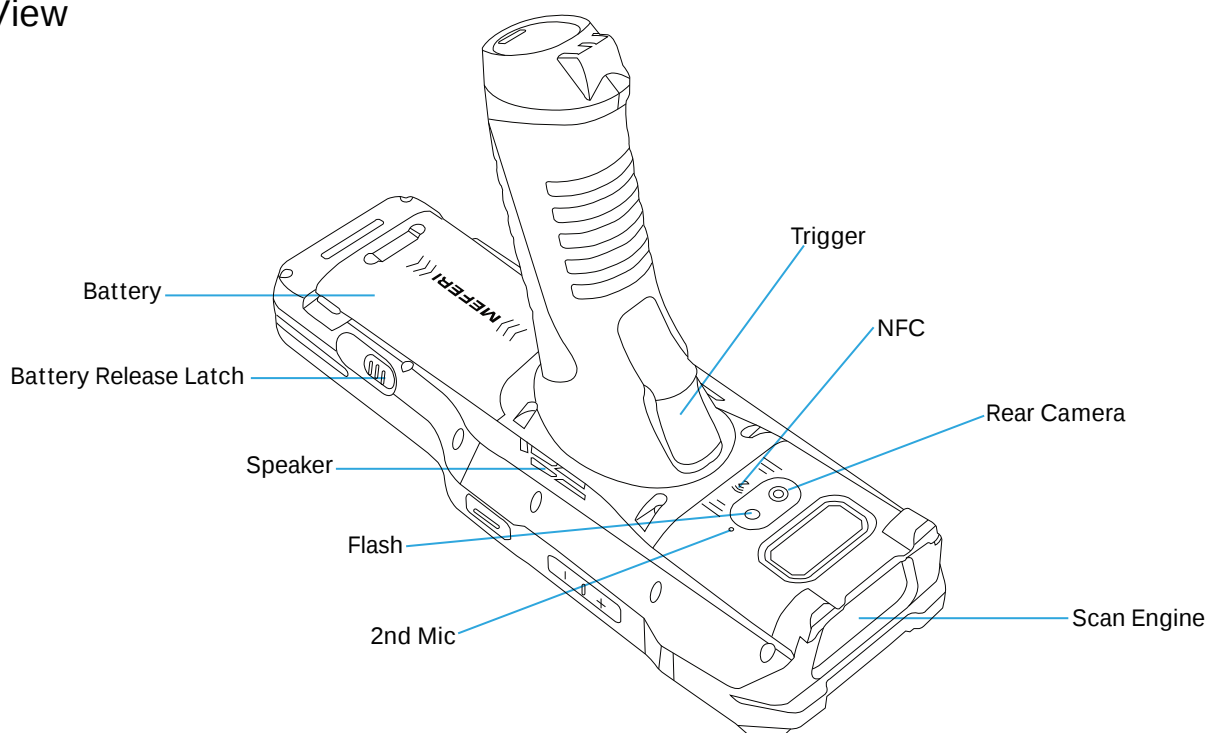


Keypads Introduction

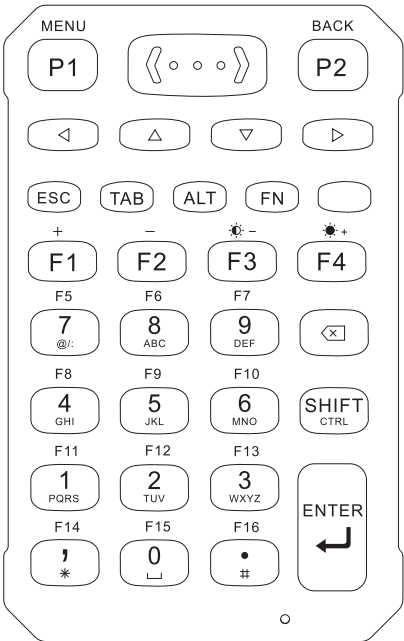

31 Keypads

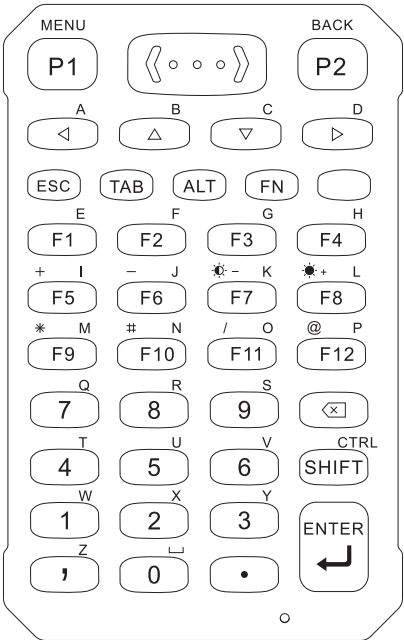

31 Keypads

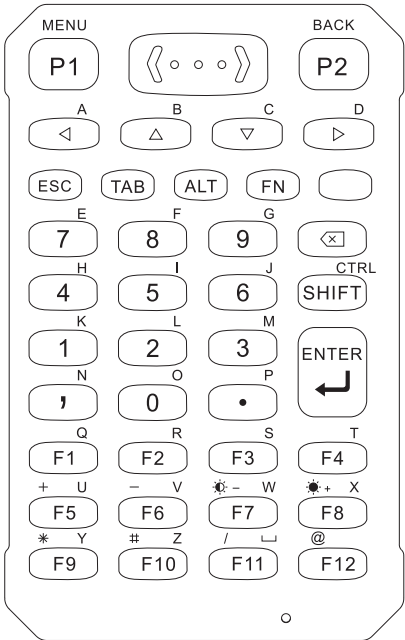

39-2 Keypads

31 Keypads Introduction

Scan button	Normal mode	^④ SHIFT+key	^② Orange key+key	Orange key+ ^① (SHIFT×2)+key	^③ FN
	Android Menu, user customizable				
	Android Backspace , user customizable				
	Enable scanning				
	Left				
	Up				
	Down				
	Right				
	ESC				
	TAB				
	ALT				
	FN function key. Press and release the FN key to activate the keyboard's alternate functions (shown in blue on the key). The FN icon appears in the status bar. Press and release the blue key again to return to the default keyboard functions.				
	Press the orange key, the keyboard can input the corresponding letter (shown in orange on the key), and the icon will appear in the status bar. Press and release the orange key again to return to the default keyboard functions.				
	F1				+
	F2				-
	F3				Brightness-
	F4				Brightness+
	0	)	space		F15
	1	!	pqrs	PQRS	F11
	2	@	tuv	TUV	F12
	3	#	wxyz	WXYZ	F13
	4	\$	ghi	GHI	F8
	5	%	jkl	JKL	F9
	6	^	mno	MNO	F10
	7	&	@: /		F5
	8	*	abc	ABC	F6
	9	(	def	DEF	F7
	Delete				
	SHIFT key, press to switch to uppercase. Press twice to lock uppercase, press three times to restore to initial.		CTRL	SHIFT key, press to switch to uppercase. Press twice to lock uppercase, press three times to restore to initial.	
	,		*		F14
	.		#		F16
	Enter function, execute the selected item or function.				

Note:

- ① Press SHIFT key twice rapidly. If "↑" appears in the top right corner of the screen, it indicates success.
- ② Press the orange key once. If "•" appears in the top right corner of the screen, it indicates success.
- ③ Press the FN key once. If "FN" appears in the top right corner of the screen, it indicates success.
- ④ Long-press the SHIFT key.

39-1 Keypads Introduction

Scan button	Normal mode	④SHIFT+key	②Orange key+key	Orange key+ ^① (SHIFT×2)+key	③FN
	Android Menu, user customizable				
	Android Backspace , user customizable				
	Enable scanning				
	Left		a	A	Left
	Up		b	B	Up
	Down		c	C	Down
	Right		d	D	Right
	ESC				
	TAB				
	ALT				
	FN function key. Press and release the FN key to activate the keyboard's alternate functions (shown in blue on the key). The FN icon appears in the status bar. Press and release the blue key again to return to the default keyboard functions.				
	Press the orange key, the keyboard can input the corresponding letter (shown in orange on the key), and the icon will appear in the status bar. Press and release the orange key again to return to the default keyboard functions.				
	F1		e	E	F1
	F2		f	F	F2
	F3		g	G	F3
	F4		h	H	F4
	F5		i	I	+
	F6		j	J	-
	F7		k	K	Brightness-
	F8		l	L	Brightness+
	F9		m	M	*
	F10		n	N	#
	F11		o	O	/
	F12		p	P	@
	0	)	space		0
	1	!	pqrs	PQRS	1
	2	@	tuv	TUV	2
	3	#	wxyz	WXYZ	3
	4	\$	ghi	GHI	4
	5	%	jkl	JKL	5
	6	^	mno	MNO	6
	7	&	mno	MNO	7
	8	*	abc	ABC	8
	9	(	def	DEF	9
	Delete				
	SHFIT switch		CTRL		
	,				
	.				
	Enter function, execute the selected item or function.				

Note:

- ① Press SHIFT key twice rapidly. If "↑" appears in the top right corner of the screen, it indicates success.
- ② Press the orange key once. If "•" appears in the top right corner of the screen, it indicates success.
- ③ Press the FN key once. If "FN" appears in the top right corner of the screen, it indicates success.
- ④ Long-press the SHIFT key.

39-2 Keypads Introduction

Scan button	Normal mode	^④ SHIFT+key	^② Orange key+key	Orange key+ ^① (SHIFT×2)+key	^③ FN
	Android Menu, user customizable				
	Android Backspace , user customizable				
	Enable scanning				
	Left		a	A	Left
	Up		b	B	Up
	Down		c	C	Down
	Right		d	D	Right
	ESC				
	TAB				
	ALT				
	FN function key. Press and release the FN key to activate the keyboard's alternate functions (shown in blue on the key). The FN icon appears in the status bar. Press and release the blue key again to return to the default keyboard functions.				
	Press the orange key, the keyboard can input the corresponding letter (shown in orange on the key), and the icon will appear in the status bar. Press and release the orange key again to return to the default keyboard functions.				
	F1		q	Q	F1
	F2		r	R	F2
	F3		s	S	F3
	F4		t	T	F4
	F5		u	U	+
	F6		v	V	-
	F7		w	W	Brightness-
	F8		x	X	Brightness+
	F9		y	Y	*
	F10		z	Z	#
	F11		space		/
	F12				@
	0	)	o	O	0
	1	!	k	K	1
	2	@	l	L	2
	3	#	m	M	3
	4	\$	h	H	4
	5	%	i	I	5
	6	^	j	J	6
	7	&	e	E	7
	8	*	f	F	8
	9	(	g	G	9
	Delete				
	SHFIT switch		CTRL		
	,		n	N	
	.		p	P	
	Enter function, execute the selected item or function.				

Note:

- ① Press SHIFT key twice rapidly. If “”appears in the top right corner of the screen, it indicates success.
- ② Press the orange key once. If “”appears in the top right corner of the screen, it indicates success.
- ③ Press the FN key once. If “”appears in the top right corner of the screen, it indicates success.
- ④ Long-press the SHIFT key.

Setting Up the Device


To start using the device for the first time:

1. Install a micro secure digital (SD) card (optional).
2. Installing a nano SIM card (optional)
3. Install hand strap (optional).
4. Install the battery.
5. Charge the device.
6. Power on the device.

Installation Guide

Instruction on SIM/TF Card installation

Gently press TF/SIM card into the tray to secure it. Follow the prompt to insert TF/SIM card into Memory card slot(as shown).

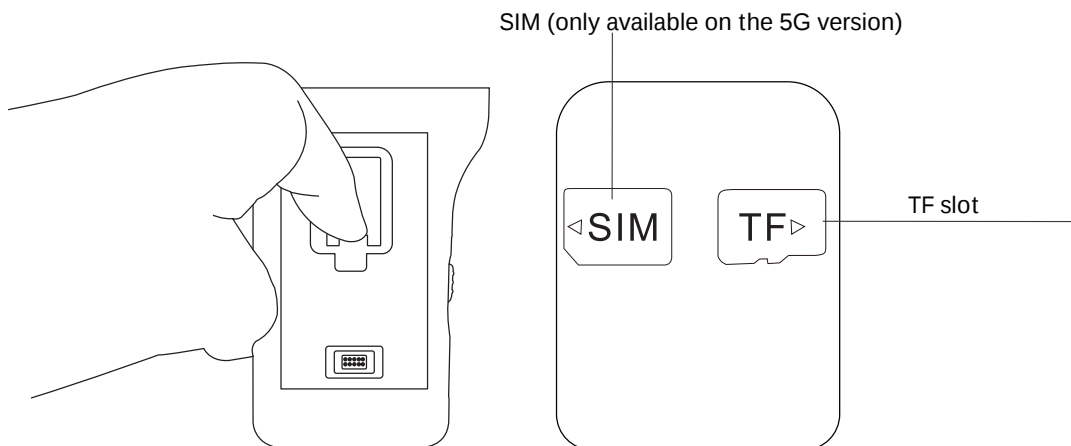


Note:


- a) SIM card are Nano SIM cards (only available on the 5G version).
- b) Overexertion should be avoided when installing or removing the TF/SIM.

Instruction of battery

1. Loosen the hand strap (if installed).
2. Align the battery into the battery compartment.
3. Slide the front of the battery into the battery compartment.

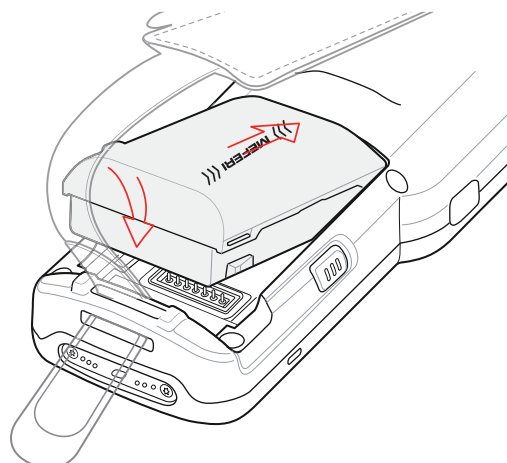

4. Press battery down firmly. Ensure that both battery release buttons on the sides of the ME74 return to the home position.
5. Tighten the hand strap (if installed).

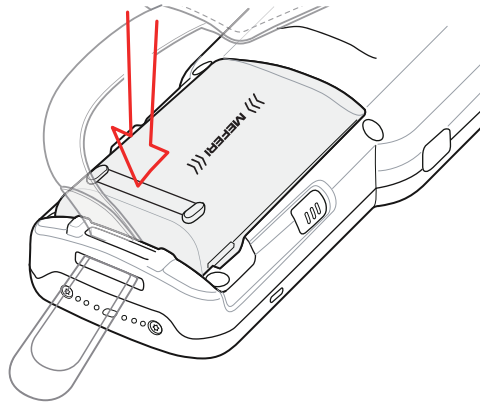


Caution on Battery Charging

1. Please do not use or charge the device in any environment with too high or low temperature;
2. Please use the charger or cradle that comes with the product to charge the battery;
3. If the device (including the battery) is not used for the moment, please separately store the battery and device and pack them in PE bags or other insulated bags in the original package in case that they become damp or contact with other electronic devices. Do not store the unpacked battery in a stack;
4. Please do not idle the device for over 3 months; be sure to charge and discharge the battery not used for the moment once per 3 months, where the stored battery should be 60%~70% charged ;
5. The lithium battery should be stored somewhere cool, dry and ventilated. It is advised to be stored in a 0~28℃ environment.


Charging Method

Charging with Type-C USB cable

For Type-C USB cable, link one end to computer and the other to device. In charging, the device's charge indicator is red, which will turn green when the device is fully charged.

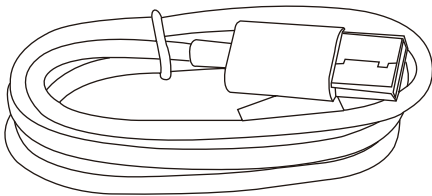


Type-C USB Cable

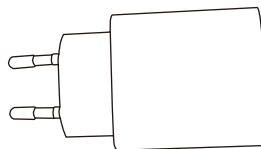


Power Adapter

Charging with Single Slot Cradle


Cradle can charge the device (including the battery) and a battery at the same time.

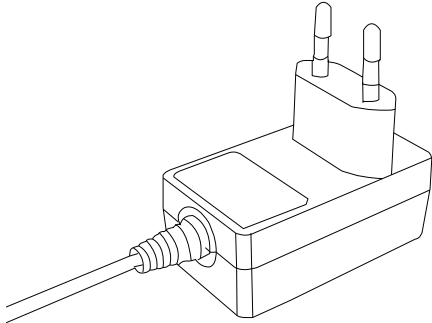

DC Power Supply

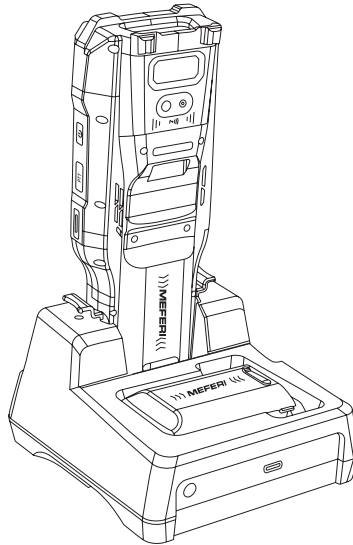

Charging

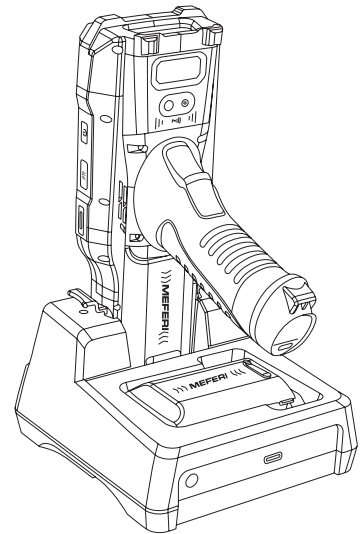


Charging (Pistol grip)


1. Connect the DC interface of the base to the power adapter.
2. Load the rear end of the battery in the device's battery slot and press the battery firmly. When the battery is correctly installed, the charge indicator will turn red. When the battery is fully charged, the indicator will turn green.
3. Put the back of the device in the slot cradle of the base and fasten left and right fasteners to complete installation of the device. And in this case, the device's charge indicator will turn red.

4-Slot Battery Charger Only with Battery Charger

1. Connect the 12V/4A power supply adapter to the DC interface.
2. Insert the battery into it according to the images on the 4-slot Battery Charger.
3. When the battery is charging, the status LED indicator next to the battery is red, and green when fully charged.
4. 4-slot battery charger charges four batteries.

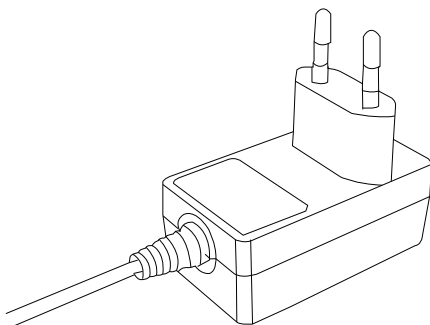

Power Supply-12V/4A/DC

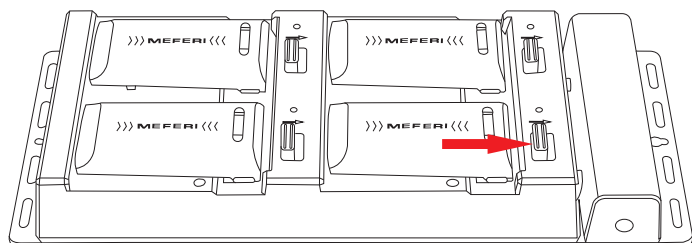


4-Slot Battery Charging


8-Slot Battery Charger Only with Battery Charger

1. Connect the 12V/5A power supply adapter to the DC interface.
2. Insert the battery into it according to the images on the 8-slot Battery Charger.
3. When the battery is charging, the status LED indicator next to the battery is red, and green when fully charged.

4. 8-slot battery charger charges 8 batteries.

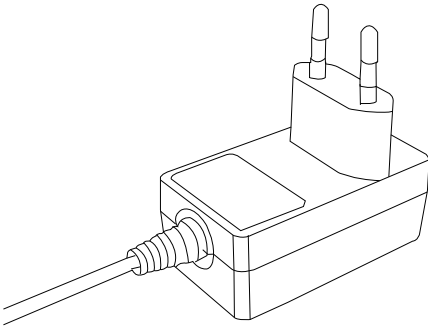


Power Supply-12V/5A/DC

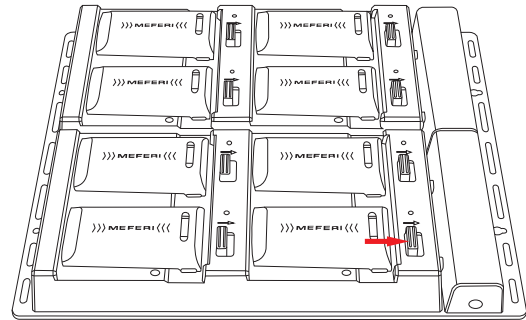


8-Slot Battery Charging

20-Slot Battery Charger Only with Battery Charger

1. Connect the 24V/10A power supply adapter to the DC interface.
2. Insert the battery into it according to the images on the 20-slot Battery Charger.
3. When the battery is charging, the status LED indicator next to the battery is red, and green when fully charged.
4. 20-slot battery charger charges 20 batteries.

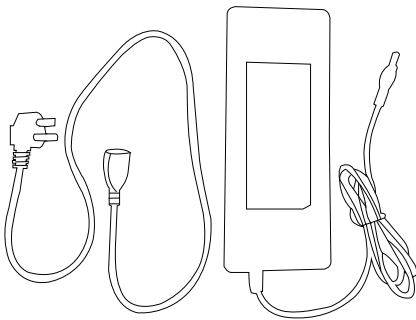

Power Supply-24V/10A/DC

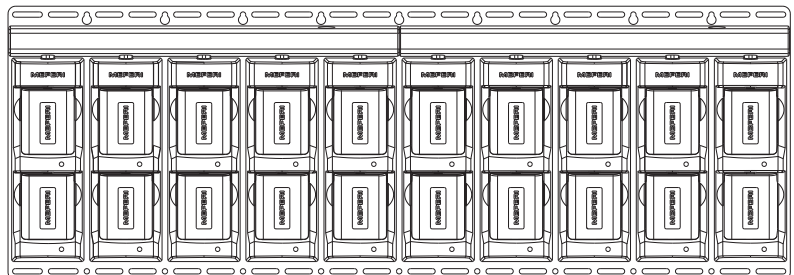

Using the Device

This chapter explains how to use the device.

Home Screen

Turn on the device to display the Home screen. Depending on how your system administrator configured your device, your Home screen may appear differently than the graphics in this chapter.



1	Status bar	Displays the time, status icons (right side), and notification icons (left side).
2	Widgets	Launches stand - alone apps that run on the Home screen.
3	Shortcut icons	Opens apps installed on the device.
4	Folder	Contains apps.
5	Menu	Recent apps.
6	Home	Main menu.
7	Back	Back to previous level.


Setting Home Screen Rotation

By default, the Home screen rotation is disabled.


1. Touch and hold anywhere on the Home screen until the options appear.
2. Touch “Home settings”.
3. Touch the “Allow home screen rotation” switch.
4. Touch Home.
5. Rotate the device.




2

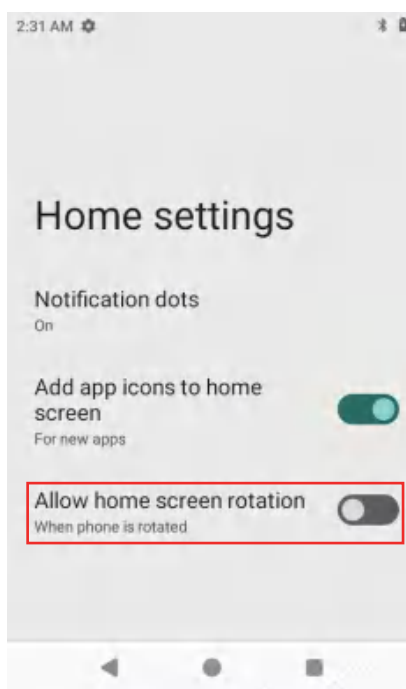

3

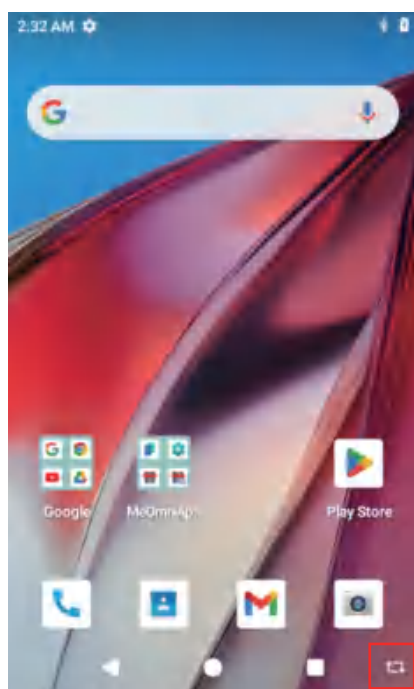

4

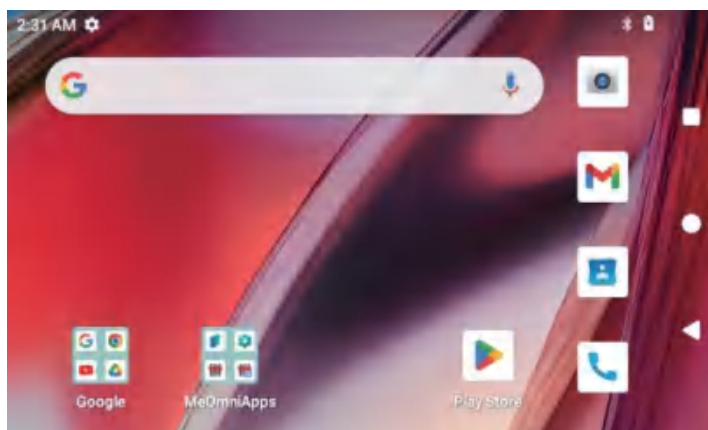

5

Status Bar

The Status bar displays the time, notification icons (left side), and status icons (right side).

If there are more notifications than can fit in the Status bar, a dot displays indicating that more notifications exist.

Swipe down from the Status bar to open the Notification panel and view all notifications and status.



Notification Icons

Notification icons indicate app events and messages.

Icon	Description
	Main battery is low.
	More notifications are available for viewing.
	Data is syncing.
	Indicates an upcoming event. AOSP devices only.
	Open Wi-Fi network is available.
	Audio is playing.
	Problem with sign-in or sync has occurred.
	Device is uploading data.
	Animated: the device is downloading data. Static: the download is complete.
	Preparing internal storage by checking it for errors.
	Indicates the ring scanner is connected to the device in HID mode.


Status Icons

Status icons display system information for the device.

Icon	Description
	Alarm is active.
	Main battery is fully charged.
	Main battery is partially drained.
	Main battery charge is low.
	Main battery is charging.
	All sounds, except media and alarms, are muted. Vibrate mode is active.
	Do Not Disturb mode active.
	Airplane Mode is active. All radios are turned off.
	Bluetooth is on.
	Connected to a Wi-Fi network. Indicates the Wi-Fi version number.
None	Not connected to a Wi-Fi network or no Wi-Fi signal.
	Call is in progress.

Managing Notifications

Notification icons report the arrival of new messages, calendar events, alarms, and ongoing events. When a notification occurs, an icon appears in the Status bar with a brief description.

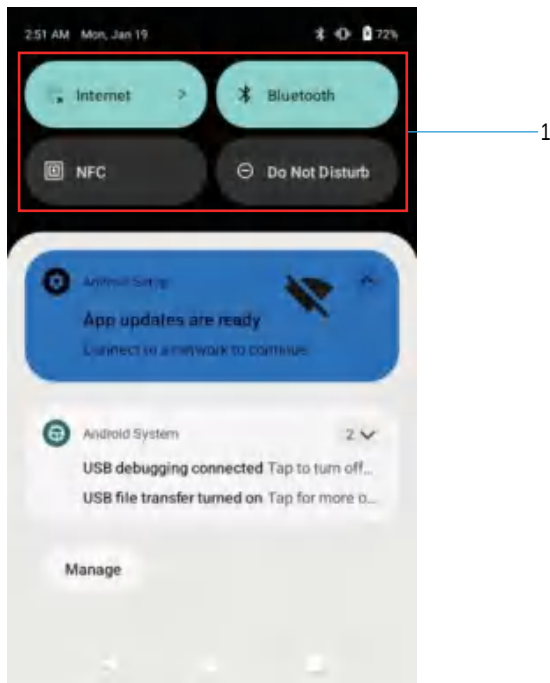


1	Quick settings bar
---	--------------------

- To view a list of all notifications, open the notification panel by dragging the Status bar down from the top of the screen.
- To respond to a notification, open the notification panel and then touch a “notification”. The Notification panel closes and the corresponding app opens.
- To manage recent or frequently used notifications, open the notification panel and then touch "Manage". Touch the "APP settings" to turn off all notifications, or touch an "app" for more notification options.
- To clear all notifications, open the notification panel and then touch “CLEAR ALL”. All event-based notifications are removed. Ongoing notifications remain in the list.
- To close the Notification panel, swipe the Notification panel up.

Opening the Quick Access Panel

Use the Quick Access panel to access frequently used settings (for example, "Bluetooth" mode).

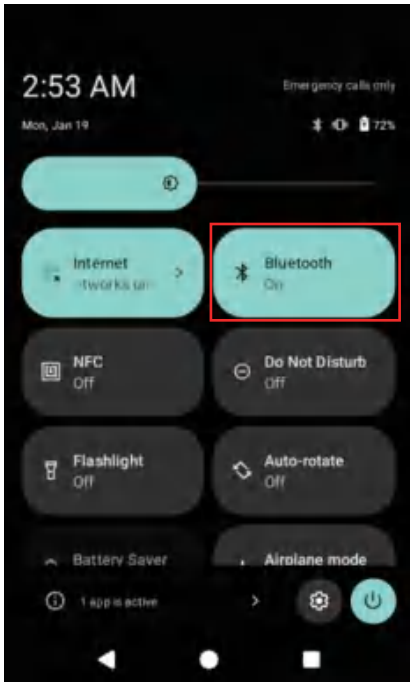

- If the device is locked, swipe down once.
- If the device is unlocked, swipe down once with two fingers, or twice with one finger.
- If the Notification panel is open, swipe down from the Quick Settings bar.

Quick Access Panel Icons

Quick Access panel icons indicate frequently used settings (for example, "Bluetooth" mode).

Icon	Description
	Display brightness - Use the slider to decrease or increase the brightness of the screen.
	Internet - Turn Wi-Fi on or off. To open Wi-Fi settings, touch the Wi-Fi network name.
	Bluetooth settings - Turn Bluetooth on or off. To open Bluetooth settings, touch Bluetooth.
	Do not disturb - Control how and when to receive notifications.
	Airplane mode - Turn Airplane mode on or off. When Airplane mode is on the device does not connect to Wi-Fi or Bluetooth.
	Auto-rotate - Lock the device's orientation in portrait or landscape mode or set to automatically rotate.
	Flashlight - Turn flashlight on or off.
	Battery saver - Turn Battery saver mode on or off. When Battery saver mode is on the performance of the device is reduced to preserve battery power.

Editing Icons on the Quick Settings Bar

The first several setting tiles from the Quick Access panel become the Quick Settings bar.

Open the Quick Access panel and touch  to edit, add, or remove settings tiles.

Battery Management




Observe the recommended battery optimization tips for the device.

- Set the screen to turn off after a short period of inactivity.
- Reduce screen brightness.
- Turn off all wireless radios when not in use.
- Turn off automatic syncing for Email, Calendar, Contacts, and other apps.
- Minimize use of apps that keep the device from suspending, for example, music and video apps.

NOTE: Before checking the battery charge level, remove the device from any AC power source (cradle or cable).

Checking Battery Status

1. Open "Settings" and touch "Battery". Or, swipe down from the screen open "Quick Access Panel" and touch "Settings icon" choose "Battery".

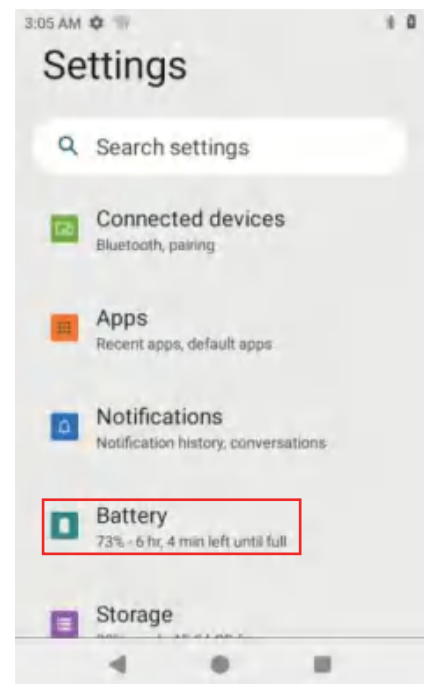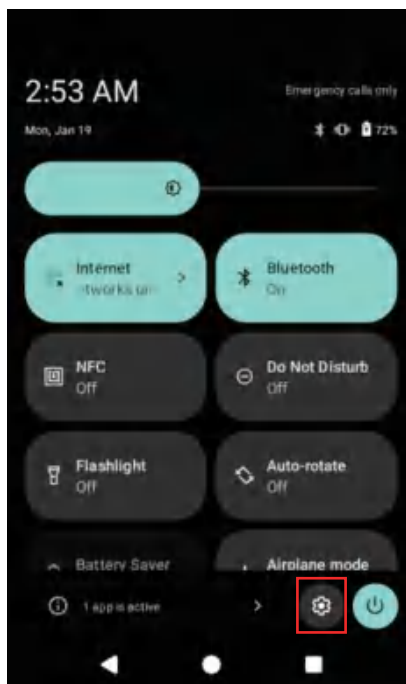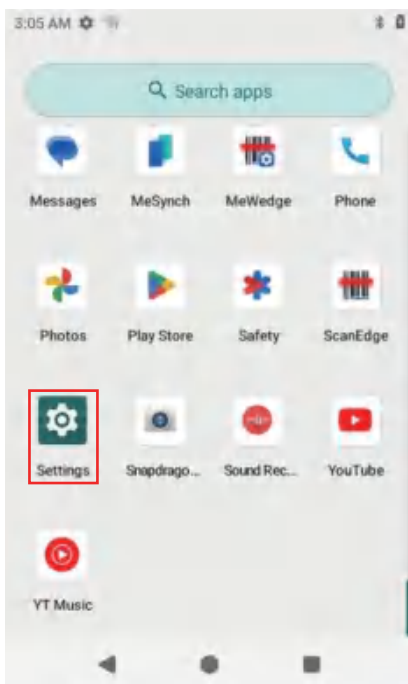

- Battery usage view usage since last full charge.
- Battery level lists the battery charge (as a percentage of fully charged).
- Battery percentage is displayed next to the battery icon.


Monitoring Battery Usage

The Battery screen provides battery charge details and battery management options to extend battery life. Different apps display different information. Some apps include buttons that open screens with settings to adjust power use. Use the "Disable" or "Force stop" buttons to turn off apps that consume too much power.

- Go to Settings.
- Touch "Battery".

To display battery information and power management options for a specific app:

- Go to Settings.
- Touch "Apps".
- Choose an app - touch "APP battery usage".

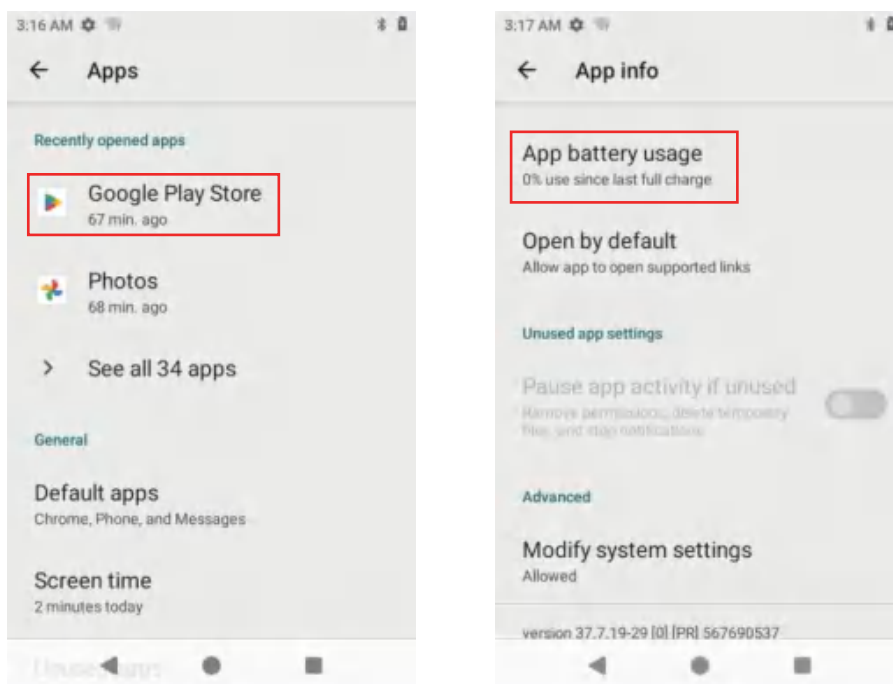

Low Battery Notification

When the battery charge level drops below the 15% below, the device displays a notice to connect the device to power. The user should charge the battery using one of the charging accessories.

Waking the Device

The device goes into Suspend mode when you after a period of inactivity (if the never setting is changed to something else in "Settings" > "Display" > "Screen timeout").

1. To wake the device from Suspend mode, press power button .The Lock screen displays.
2. Swipe the screen up to unlock.


- If the Pattern screen unlock feature is enabled, the Pattern screen appears instead of the Lock screen.
- If the PIN or Password screen unlock feature is enabled, enter the PIN or password after unlocking the screen.

CAUTION: If you enter the PIN, password, or pattern incorrectly five times, you must wait 30 seconds before trying again.

- If you forget the PIN, password, or pattern, contact your system administrator.


USB Communication

insert one end of the device's USB cable to the device and the other to the PC's USB port to connect the device to the PC, press and hold the top of screen at any interface of the device and pull down to enter the USB settings interface:

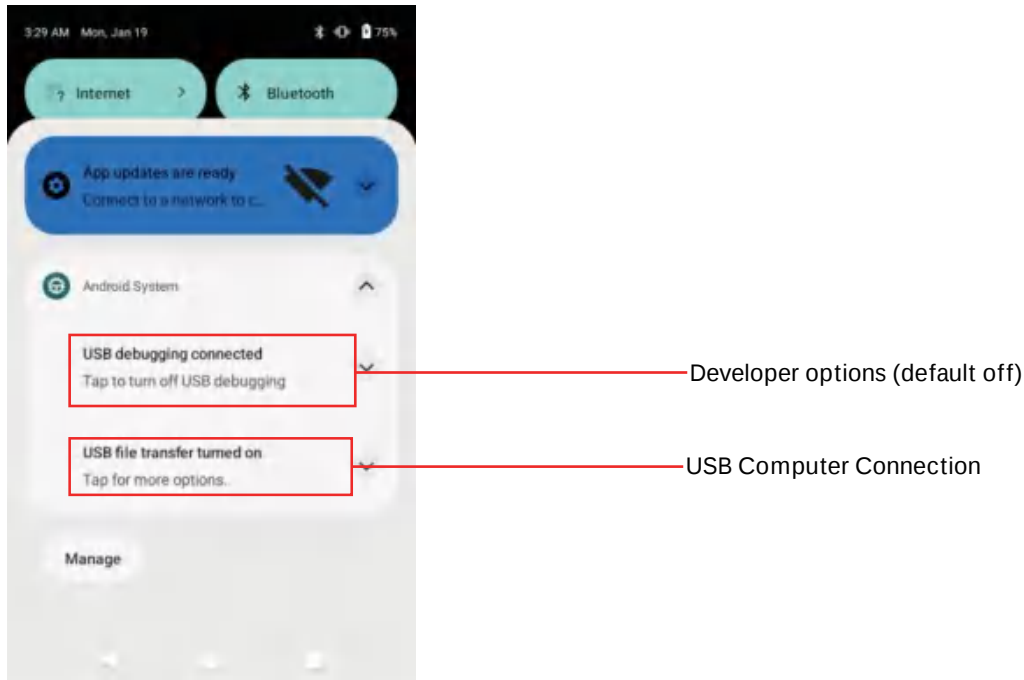


Enable USB Debugging


1. Open Settings - "About phone" - Click "Build number" 5 times in a row.

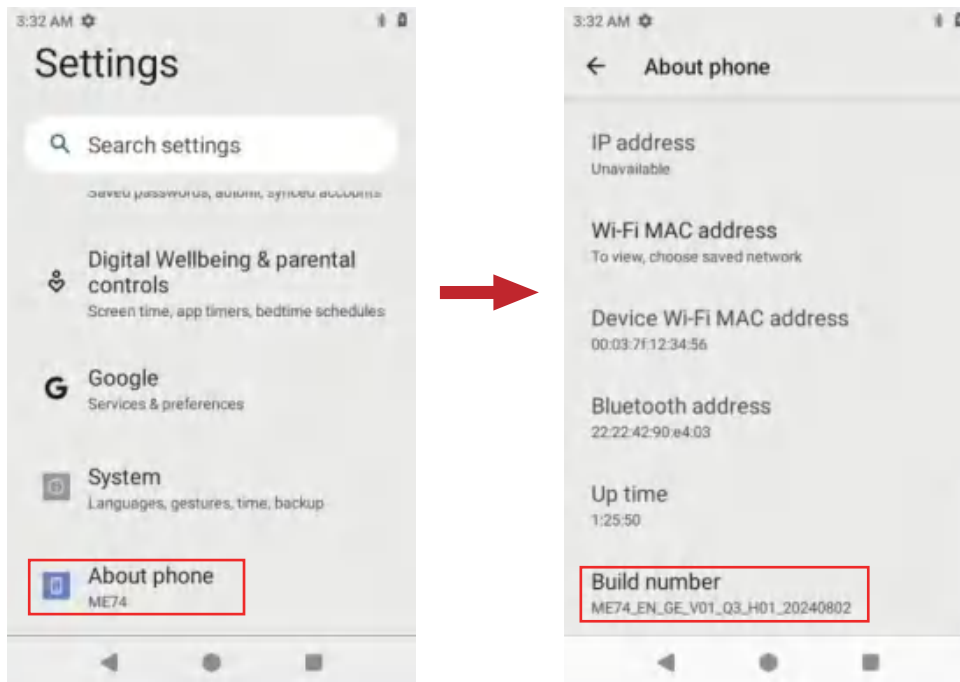

2. Open Settings - "System" - "Developer options".

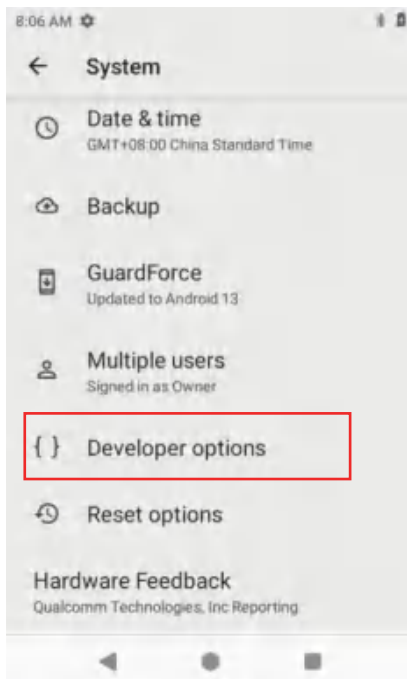


3. Enable USB Debugging to enter the debugging mode.

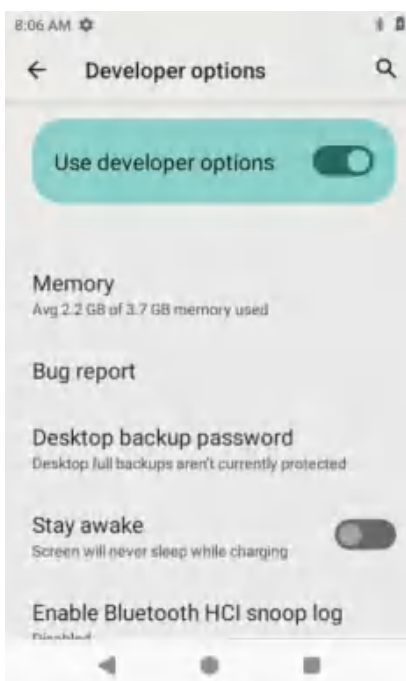

Transferring Files

1. Connect the device to PC by a USB cable.
2. Pull down the status bar to open the notification panel. Select "File Transfer" in USB preferences to transfer media files to Windows or transfer files by any Android file transfer app to Mac.

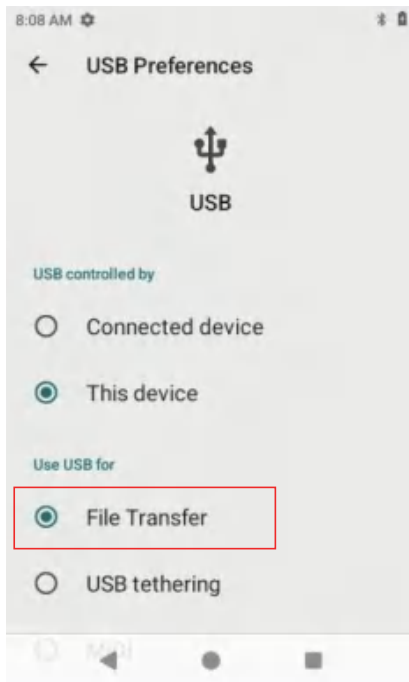

3. At PC end, open My Computer to access ME74 device.




5. Copy files to and from the device or delete files as required.



Transferring Photos (PTP)

NOTE: It is recommended to install a microSD card in the device for storing photos due to limited internal storage.

1. Connect the device to PC by a USB cable.
2. Pull down the status bar to open the notification panel and select "PTP" in USB use for to transfer photos to Windows.

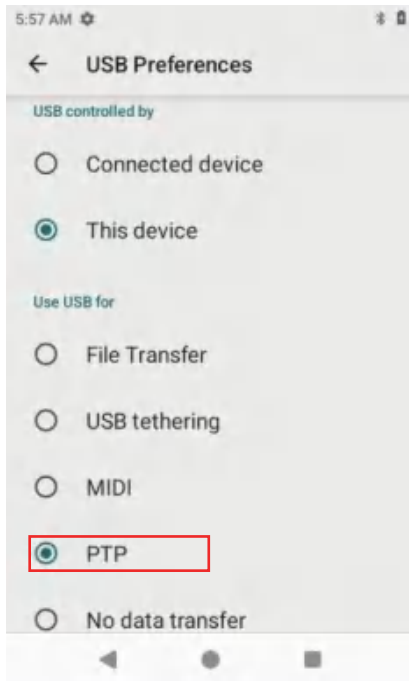

3. At PC end, open My Computer to access ME74 device.



4. Open the SD card or the Internal storage folder.
5. Copy or delete photos as required.




SD Card mounting

In this mode, no microSD Card directory folder will be shown at PC end until a microSD Card is inserted into PC.

Charging mode

1. Connect the device to PC by a USB cable.
2. Pull down the status bar to open the notification panel and select "No Data Transfer" in USB Purpose.

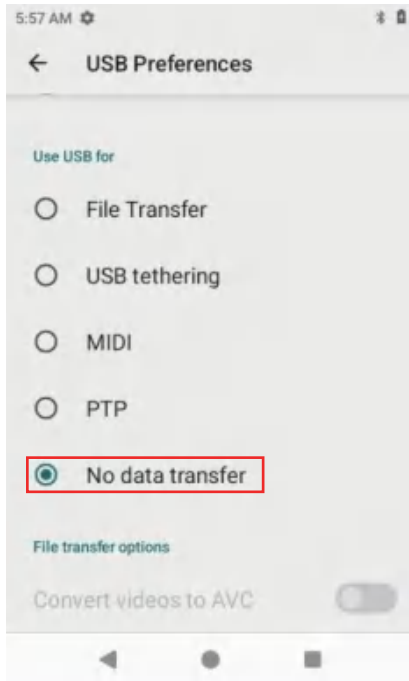

3. In the charging mode, data communication is not available.

Disconnection from PC


Caution: Please safely unplug the device as instructed at PC before removing the USB cable in case of loss of data.

1. Find the external device identification in the task bar at the bottom right corner of PC.
2. Right click to select Unplug ME74 Device.
3. Carefully remove the USB cable.

Power off



Method 1

1. Long press the power key and wait for a popup dialog box.
2. Tap the power off option.

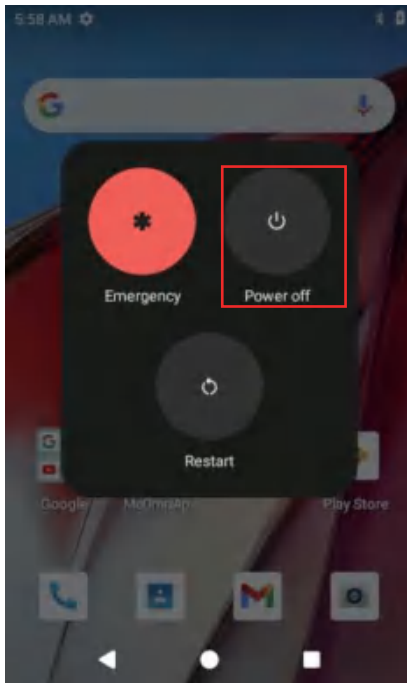

Method 2


1. Open the Quick Access Panel, scroll down, click "⏻", and select power off.

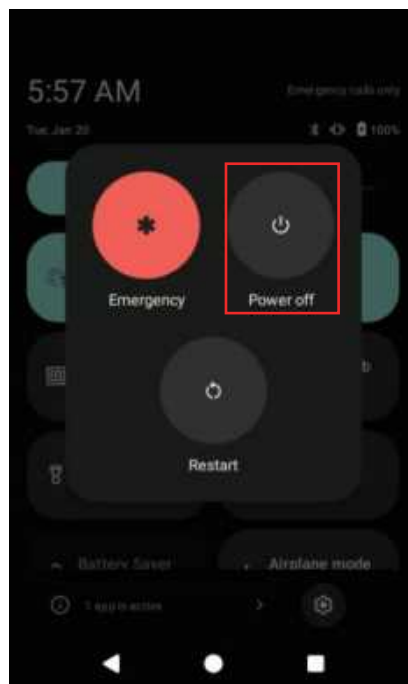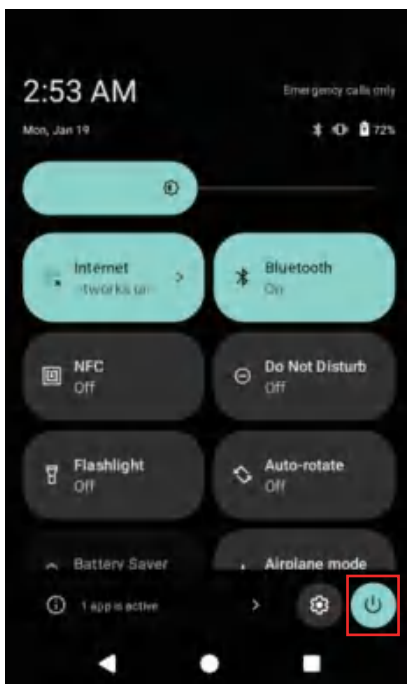

Restart



Method 1

1. If an app stops responding, long press the power key for hot reset.

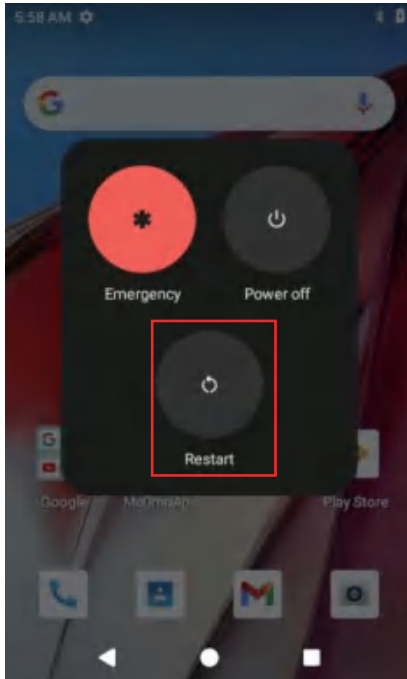


Method 2

1. Open the Quick Access Panel, scroll down, click "⏻", and select Restart

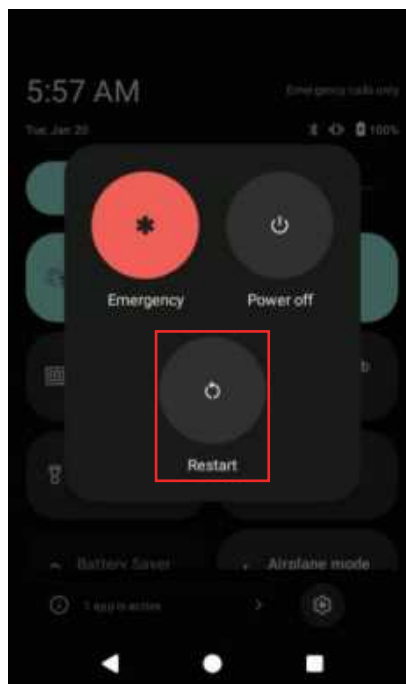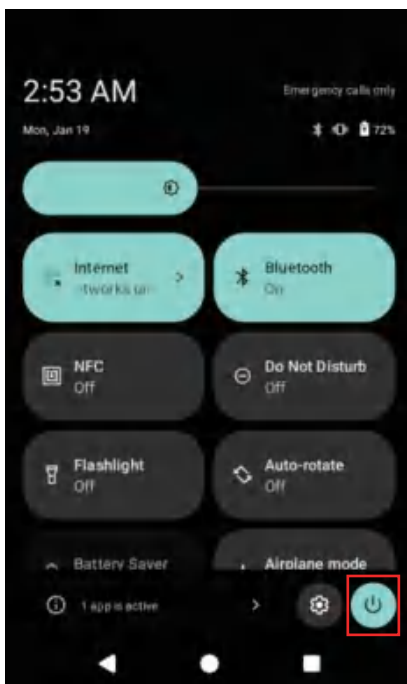

Task Manager

1. Click the menu button on the right and the list below will appear

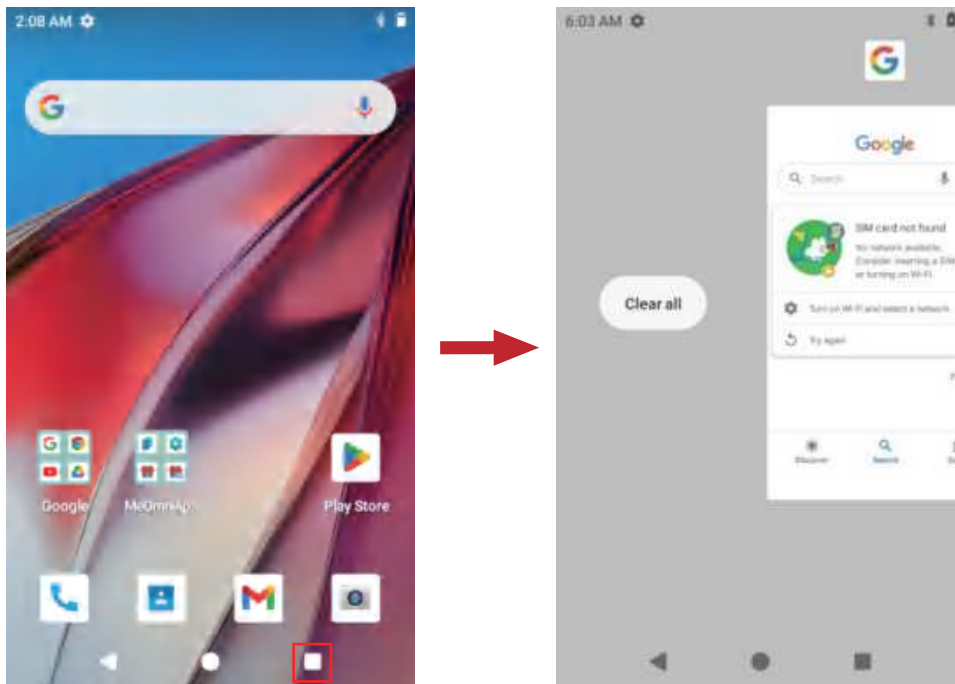

2. Slide left or right the screen to find any app accessed lately.
3. Slide up to clear apps lately accessed from the background.
4. Tap the "CLEAR ALL" to clear all the lately accessed apps from the background.
5. Tap apps to be switched to switch apps.


About Device

Open Settings - "About phone" to view information of this Terminal Device.


- Model—view the device's model.
- Phone SN—display the device's unique identifier--SN.
- Android version—view the device's Android version.
- IP address—display the device's IP address.
- Wi-Fi MAC address—display the device's WIFI physical address.
- Bluetooth address—display the device's Bluetooth address.
- Build number—display the device's Build number.

Upgrading

Local Upgrading--open Settings - "System" - "GuardForce" - Select Local Upgrade.

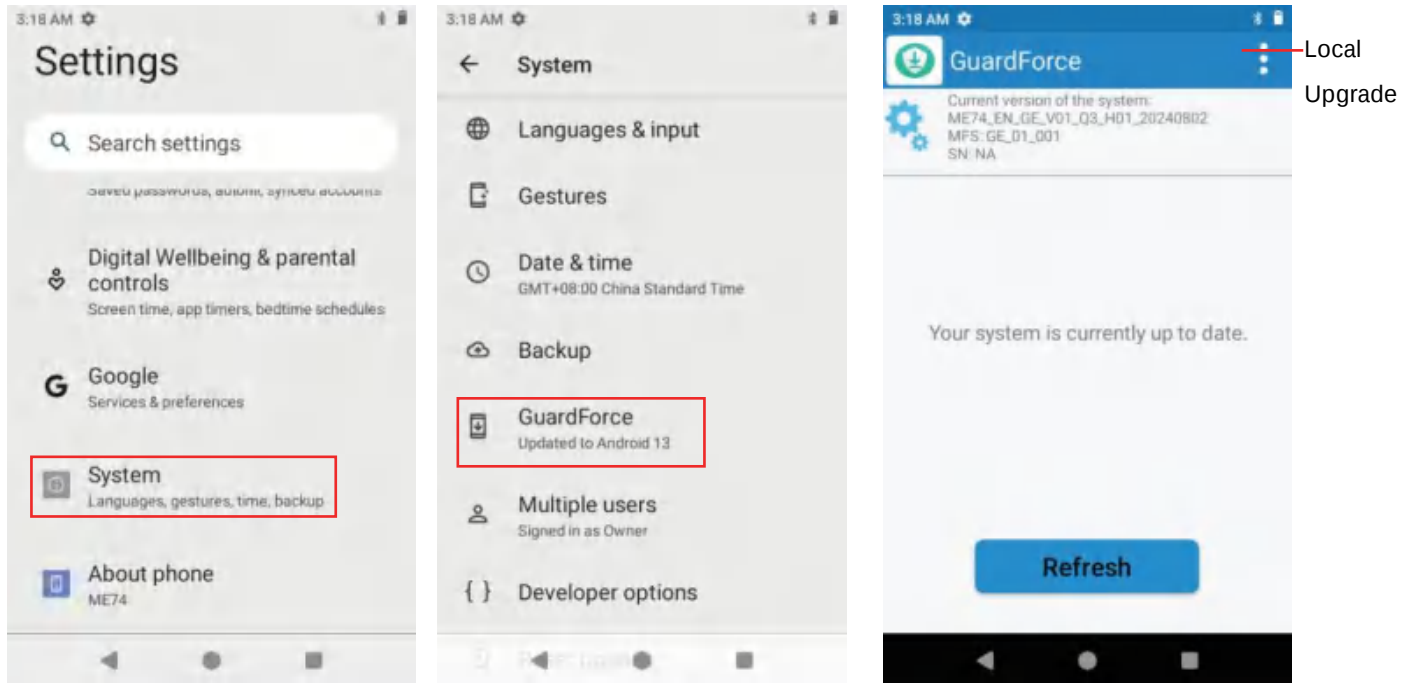

Remote Upgrading--open Settings - "System" - "GuardForce", For remote upgrading, please contact MEFERI's technical support team, And provide the device SN number and current version.

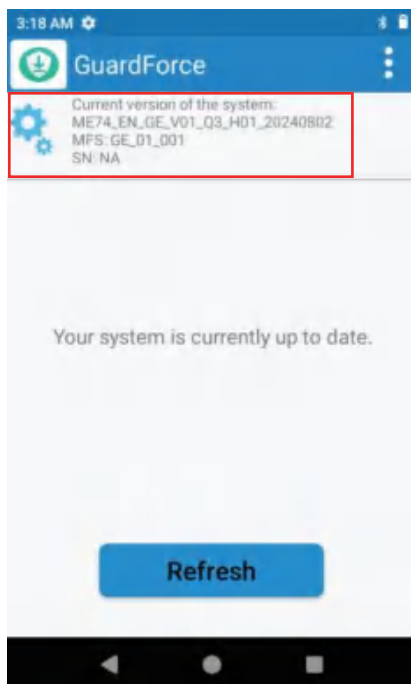

Settings

Introduction


This chapter describes the settings on the device.

Accessing Settings

There are multiple ways to access settings on a device.


Method 1

Swipe down from the top of the Home screen to open the Quick Access panel and touch "settings icon".

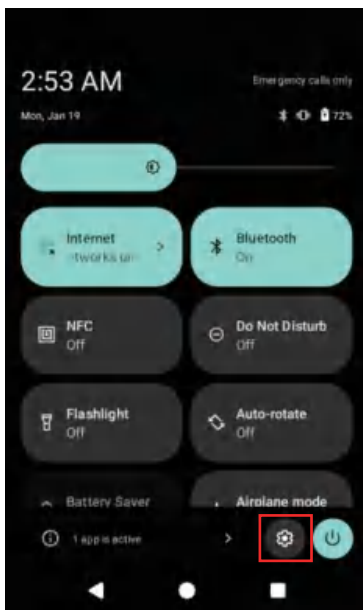

Method 2

Swipe up from the bottom of the Home screen, touch "Settings APPS".

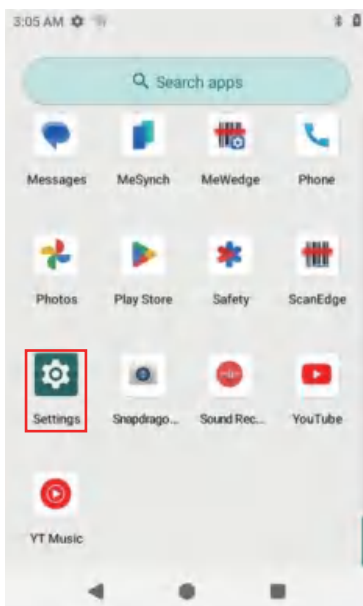

Display Settings

Introduction


Use Display settings to change the screen brightness, enable screen rotation, set sleep time, and change font size.

Setting the Screen Brightness Manually

Manually set the screen brightness using the touchscreen.


Method 1

1. Swipe down twice from the top of the Home screen to open the Quick Access panel and touch "☼"
2. Slide the icon to adjust the screen brightness level.

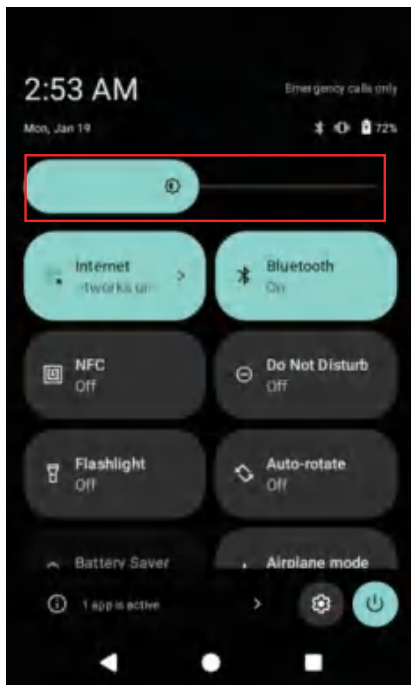

Method 2


1. Swipe down from the top of the Home screen to open the Quick Access panel and touch "settings icon" or swipe up from the bottom of the Home screen, touch "Settings APPS".
2. Touch "Display".
3. Touch "Brightness level", slide the icon to adjust the screen brightness level.

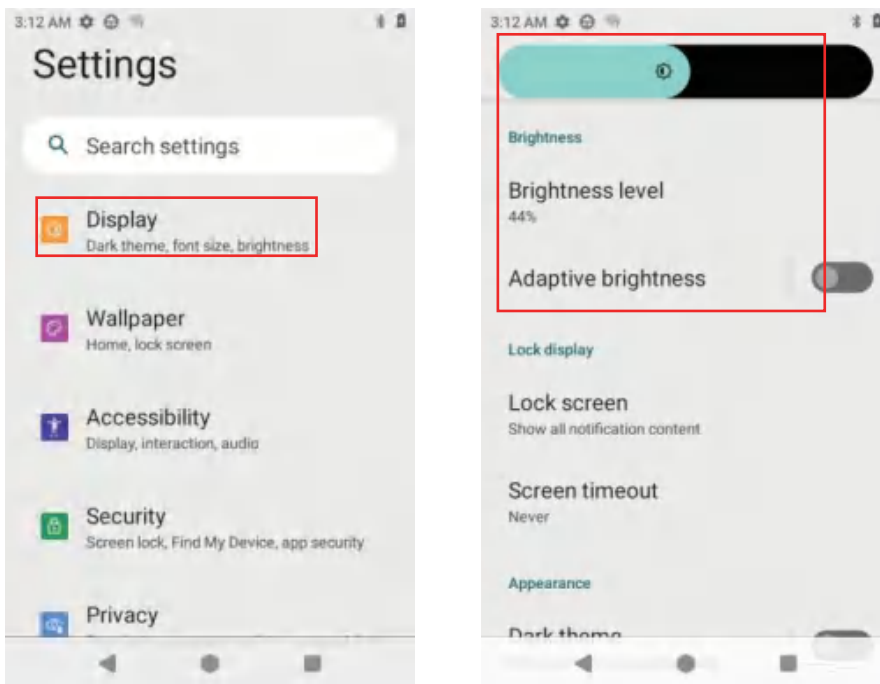

Setting the Screen Brightness Automatically

Automatically adjust the screen brightness using the built-in light sensor.

1. Swipe down from the top of the Home screen to open the Quick Access panel and touch "settings icon" or swipe up from the bottom of the Home screen, touch "Settings APPS".
2. Touch "Display".
3. If disabled, touch "Adaptive brightness" to automatically adjust the brightness. By default, "Adaptive brightness" is enabled. Toggle the switch to disable.

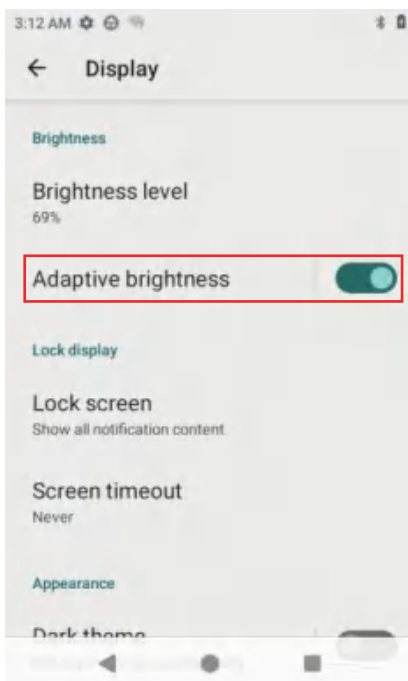


Setting Screen Rotation

By default, screen rotation is off.

NOTE: To change the Home screen rotation, see Setting Home Screen Rotation.

1. Go to Settings.
2. Touch "Display".
3. Touch "Auto-rotate screen".

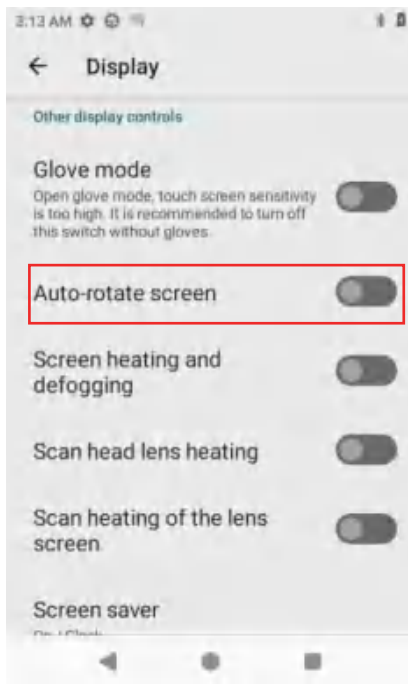

Setting Screen Timeout


Set the screen sleep time.

1. Go to Settings.
2. Touch "Display".
3. Touch "Screen timeout", select one of the sleep values:
 - None (default)
 - 15 seconds
 - 30 seconds
 - 1 minute
 - 2 minutes
 - 5 minutes
 - 10 minutes
 - 30 minutes

Setting Font Size

Set the size of the font in system apps.

1. Go to Settings.
2. Touch "Display".
3. Touch "Display size and text", you can set the font size or display size

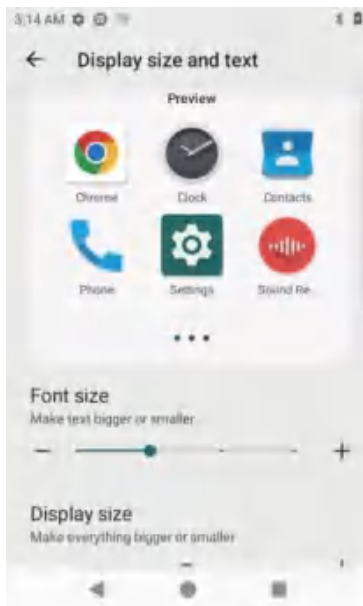


General Sound Setting

Introduction

Use the Sound settings to configure media and alarm volumes.

1. Go to Settings.
2. Touch "Sound & vibration".
3. Touch an option to set sounds.

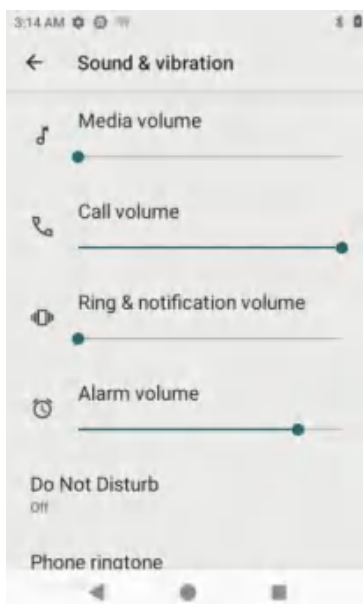

Sound Options

- Media volume—Controls the music, games, and media volume.
- Call volume—Controls the Call volume.
- Ring & notifications volume—Controls the notification volume.
- Alarm volume—Controls the alarm clock volume.
- Do Not Disturb—Mutes some or all sounds and vibrations.
- Phone ringtone - Select a sound to play when the phone rings.
- Media—Shows the media player in Quick Settings while sound is playing, allowing quick access.
- Vibrations & haptics
 - Ring vibrations
 - Vibrate first then ring gradually
 - Notifications vibrations
 - Alarm vibrations
 - Touch feedback
 - Media vibrations
- Default notification sound—Select a sound to play for all system notifications.
- Default alarm sound—Select a sound to play for alarms.
- Touch sounds—Play a sound when making screen selections
- Charging sounds and vibration.

System Settings


Introduction

Use System settings to change the languages, set data & time, and factory reset.


Changing the Language Setting

Use the Language & input settings to change the device's language.

1. Go to Settings.
2. Touch "System" > "Languages & input".

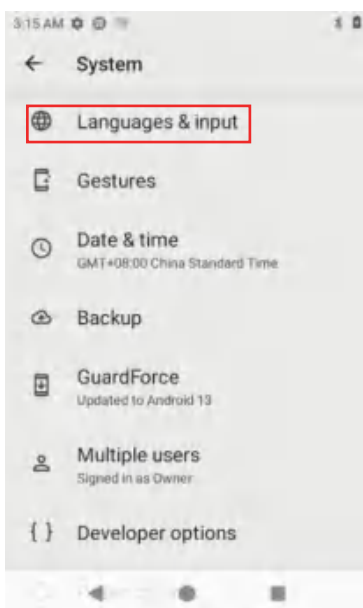


3. Touch “Languages”. A list of available languages displays.
4. If the desired language is not listed, touch Add a language and select a language from the list.
5. Touch and hold to the right of the desired language, then drag it to the top of the list.
6. The operating system text changes to the selected language.

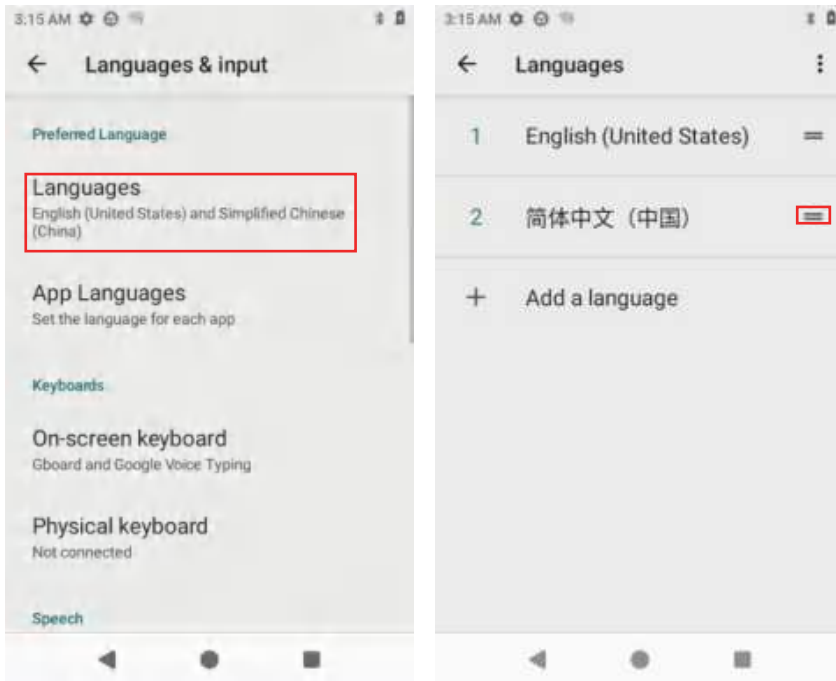


Setting the Date and Time

You are only required to set the time zone or set the date and time if the wireless LAN does not support Network Time Protocol (NTP) or when not connected to a cellular/wireless network.

1. Go to Settings.
2. Touch “System” > “Date & time”.

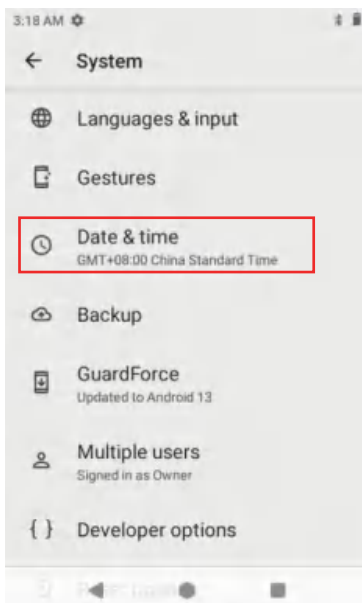


3. Touch “Date” to select the date in the calendar, touch OK.

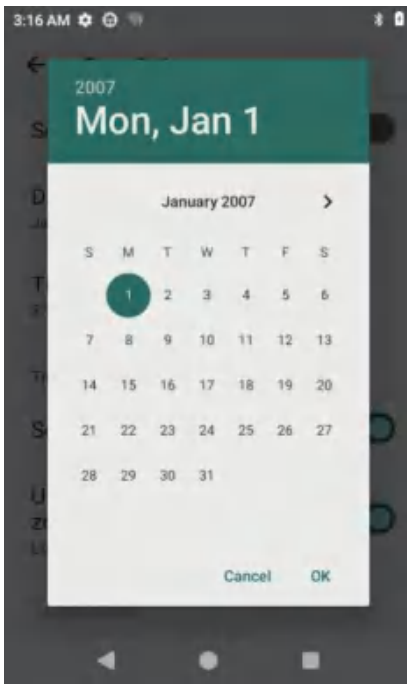

4. Touch “Time”.

- a) Touch the green circle, drag to the current hour, and then release.
- b) Touch the green circle, drag to the current minute, and then release.
- c) Touch “AM” or “PM”.

5. Touch OK.

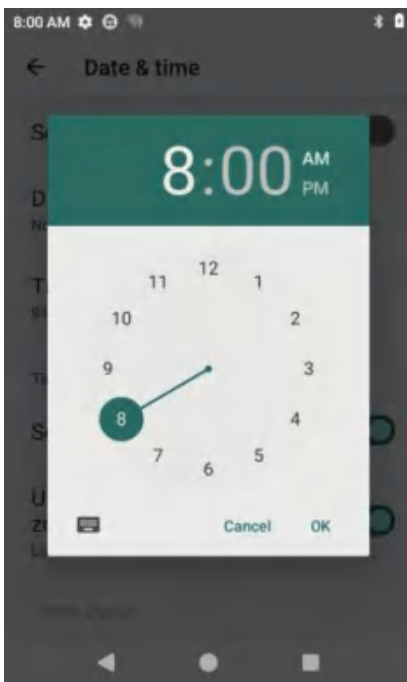

6. Touch “Use 24-hour format”.

Notifications

Introduction



The user can configure notifications for the device and for specific apps. Device & app notifications settings allow the user to configure how notifications occur on the device. App settings allow the user to configure how notifications for a specific app occur.

1. To view Device & app notifications settings, touch Settings > Notifications > Device & app notifications.
2. To view app notifications, Settings > Notifications > App settings, and then select an app.

Setting App Notifications


Configure the notifications settings for a specific app.

1. Go to Settings.
2. Touch "Notifications".
3. Touch "App settings" > See "All apps". The App info screen displays.

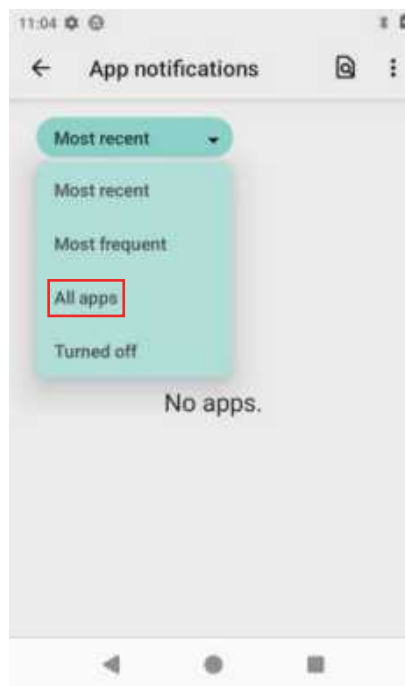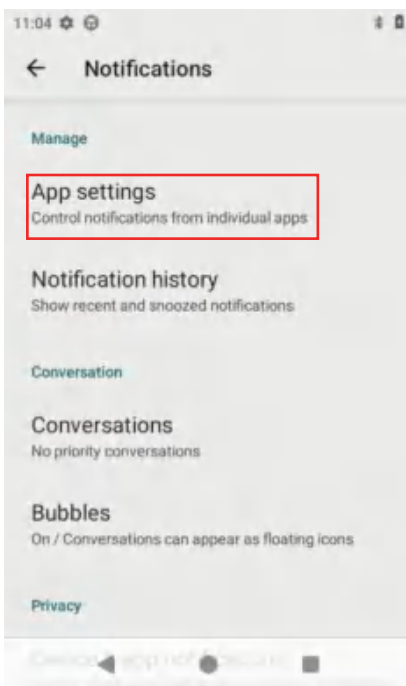


4. Select an app.
5. Touch "Notifications".

Options vary depending on the app selected.

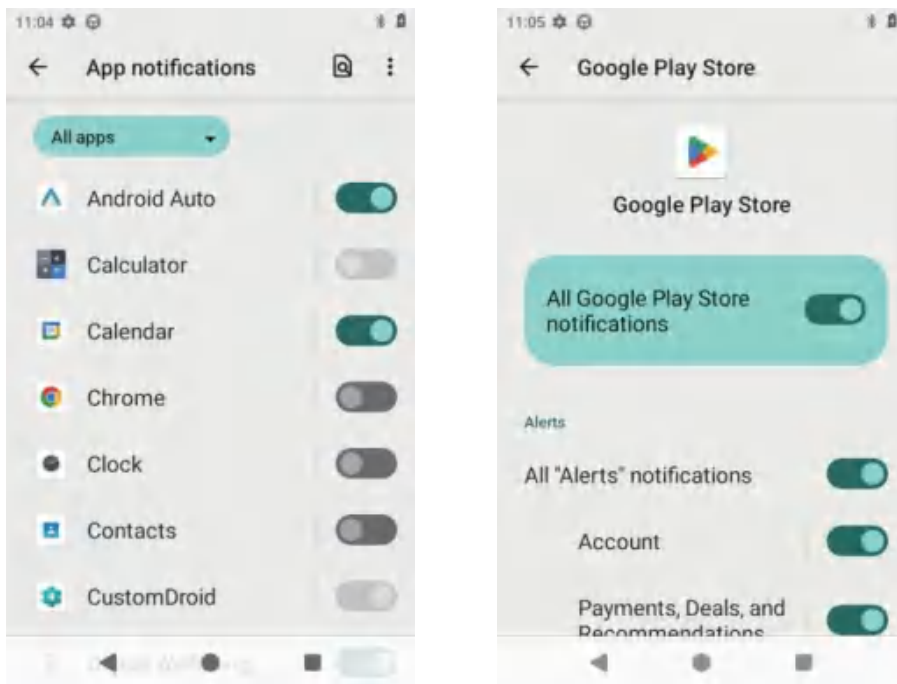


6. Select Setup: Show notifications - Select to turn all notifications from this app on (default) or off. Touch a notification category to display additional options.

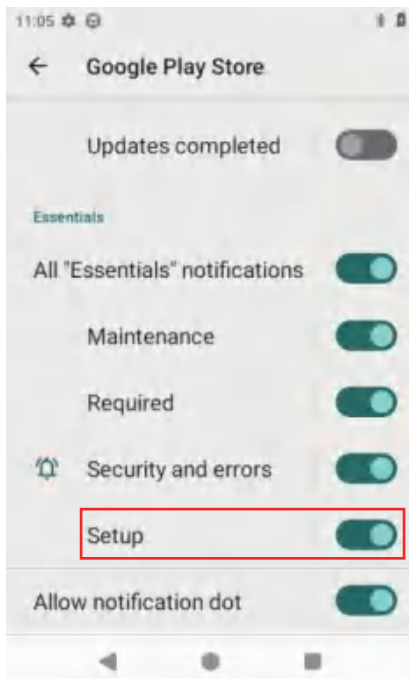

- Pop on screen - Allow notifications from this app to pop notifications on the screen.
- Sound - Allow notifications from this app to make sound.
- Vibrate - Allow notifications from this app to make vibrate the device.
- Blink light - Allow notifications from this app the light the Notification LED.
- Show notification dot - Allow notifications from this app to add a notification dot to the app icon.
- Override Do Not Disturb - Let these notifications continue when Do Not Disturb is on.


- Silent - Do not allow notifications from this app to make a sound or vibration.
- Minimize - In the Notification panel, collapse notifications to one line.

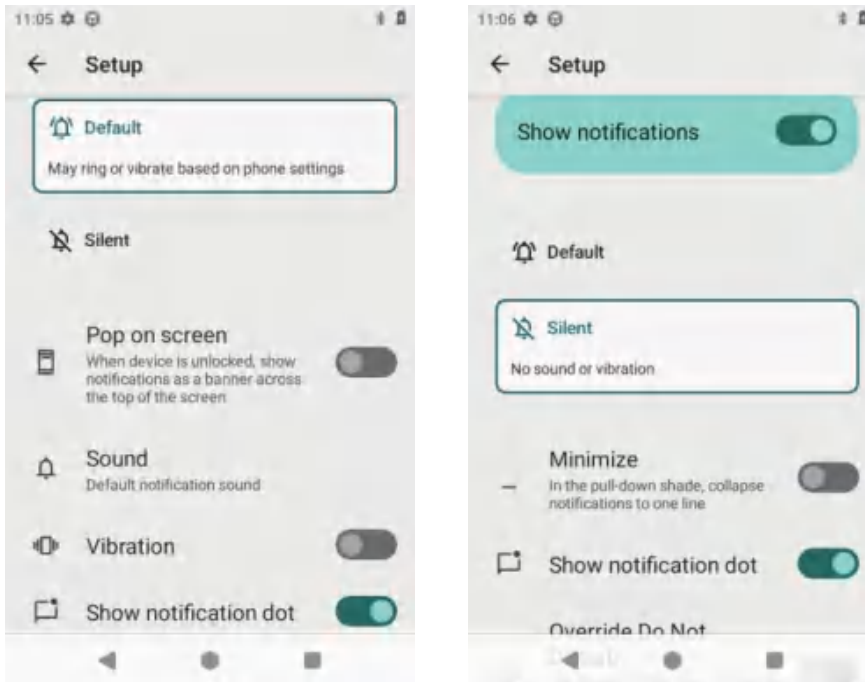

Controlling Lock Screen Notifications

Control whether notifications can be seen when the device is locked.

1. Go to Settings.
2. Touch "Notifications".
3. Touch "Notifications on lock screen" and select one of the following:
 - Show conversations, default, and silent.
 - Hide silent conversations and notifications.
 - Don't show any notifications.

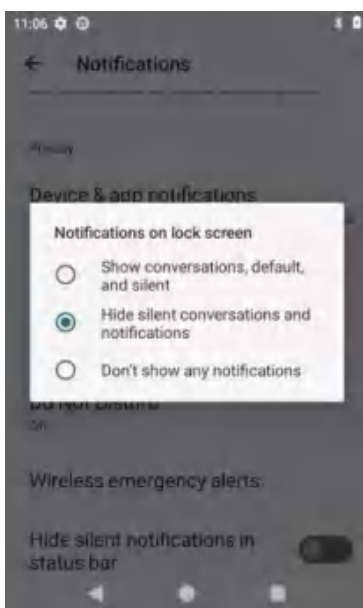

Applications

Introduction

Apart from the standard pre-installed Android applications, the following table lists MEFERI-specific applications installed on the device.

Installed Applications


Icon	Description
	Calculator - Provide basic and scientific calculating functions.
	Calendar - View and manage calendar events.
	Camera - Take photos and record videos.
	Chrome - Access the network.
	Clock - Set the alarm and timer.
	Contacts - Manage contact information.
	Drive - Cloud Drive to store files
	Files - Organize and manage all the files in the device.
	Gmail - Receive and send e-mails.
	Google - Search engine.
	Google TV - Google smart TV
	Map- View satellite maps, public transport and driving directions.
	Meet - Videoconference.
	Messaging - Receive and send SMS and MMS.
	Phone - Dial a phone number for voice communications.
	Photos - View or edit photos in the device and microSD Card.
	Play Store - Download apps developed with the Android SDK and distributed by Google.
	Settings - Configure ME74.
	Sound Recorder - Record audio files.

	YouTube - Upload original content and share your videos.
	YT Music - Play audio files online or stored on your device.
	MeSynch - Enables to copy device settings to other devices with just one scan of a barcode.
	MeWedge - Configures a set of scanning head parameters for each application.
	ScanEdge - Configures the settings of the scanning head parameters.
	CustomDroid - Installing your custom functions for the Android OS.
	KeyReMap - creates and adjusts the keyboard to your requirements
	Safety - Safety settings (Emergency SOS, Emergency sharing, etc).
	GuardForce - Android provides regular updates with the latest security patches
	eSIM Toolkit - Can be used as a SIM card, no need to insert the card.

Accessing Apps

Access all apps installed on the device using the APPS window.

1. On the Home screen, swipe up from the bottom of the screen.
2. Slide the APPS window up or down to view more app icons.
3. Touch an icon to open the app.

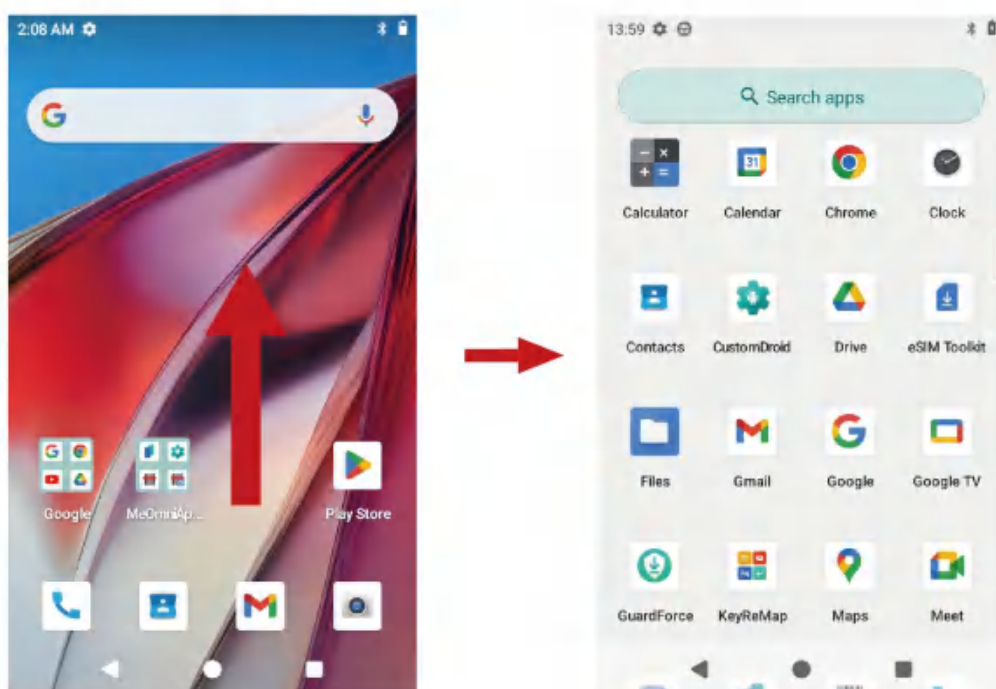

Switching Between Recent Apps

1. Touch Menu “”.
2. Slide left or right the screen to find any app accessed lately.
3. Slide up to clear apps lately accessed from the background.
4. Tap the "CLEAR ALL" to clear all the lately accessed apps from the background.
5. Tap apps to be switched to switch apps.




Key Mapping


Key mapping applies to all the physical keys except the power key. Each mapped key can be granted with a new key value.

Steps for key mapping:


1. Open KeyRemap.

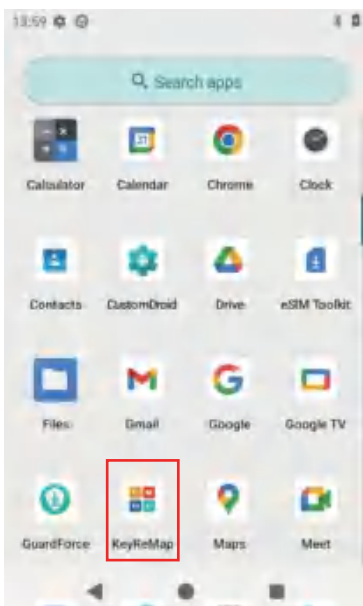


2. Select any physical key - Replace by a new key, press the physical key for key mapping, the key value and name will be shown.

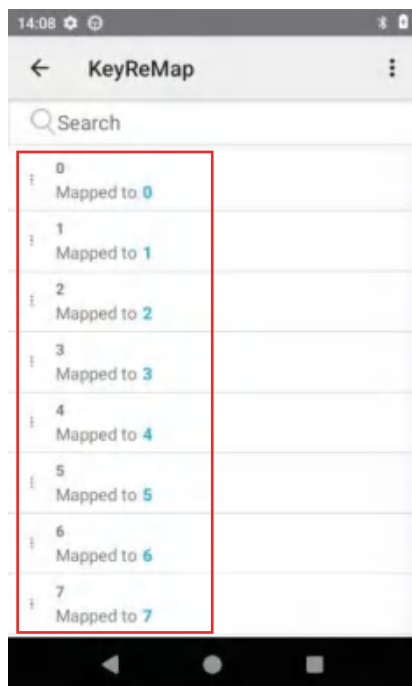

3. For example, select the "1" key.

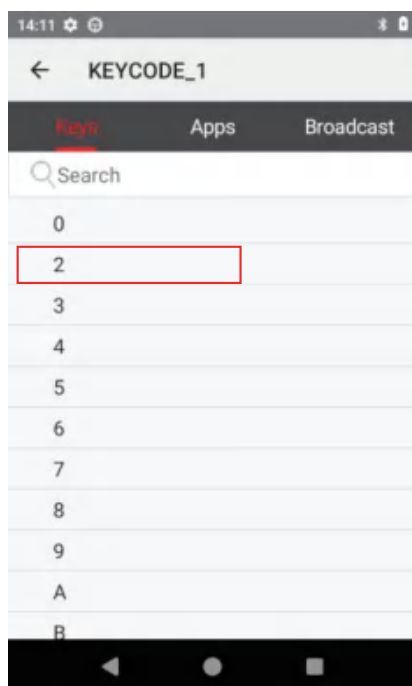


Key Mapping Function 1

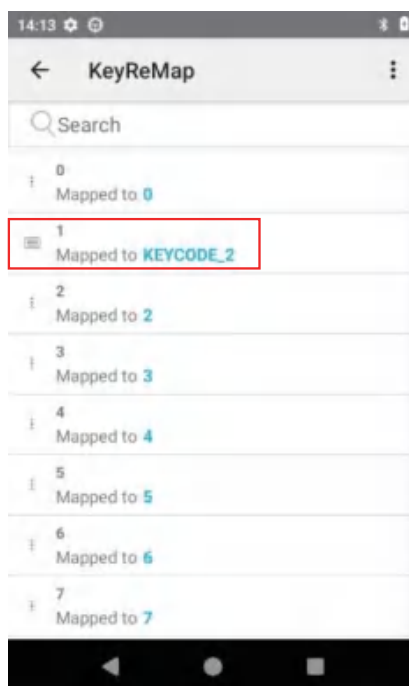


Key Mapping Function 2

4. Select any physical key - Replace with App, press the physical button to map the button, and select APP.

5. For example, select the "3" key.

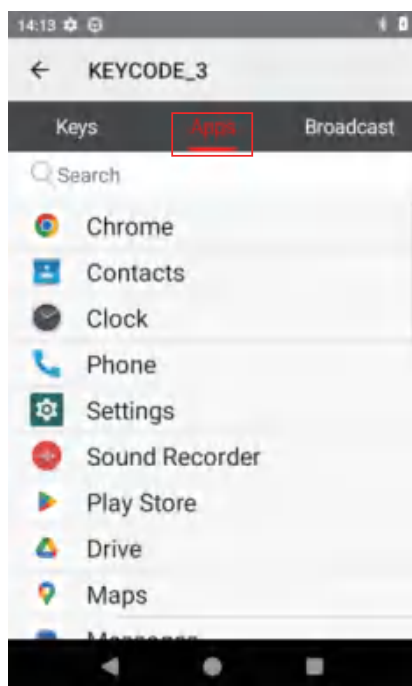


APP Mapping Function 1

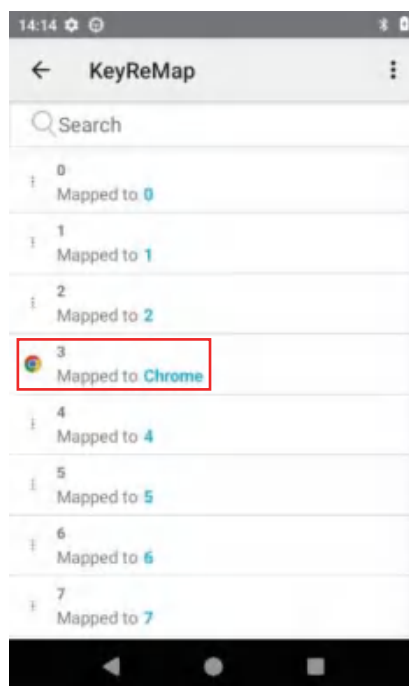


APP Mapping Function 2

6. Select any physical key - replace with broadcast, press the physical button to map the button, select broadcast, edit the content, and click Save.

7. For example, select the "5" key.

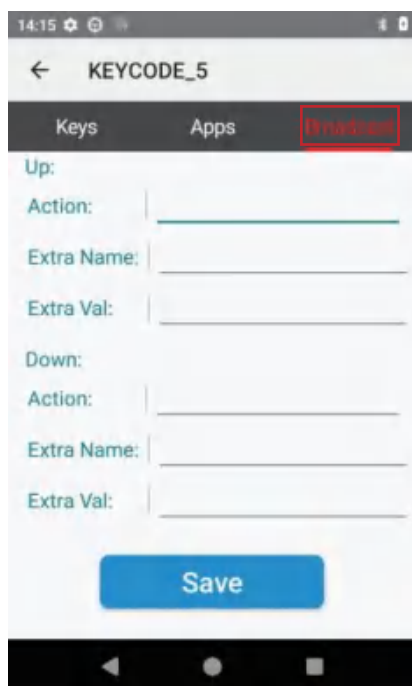

Broadcast Mapping Function 1

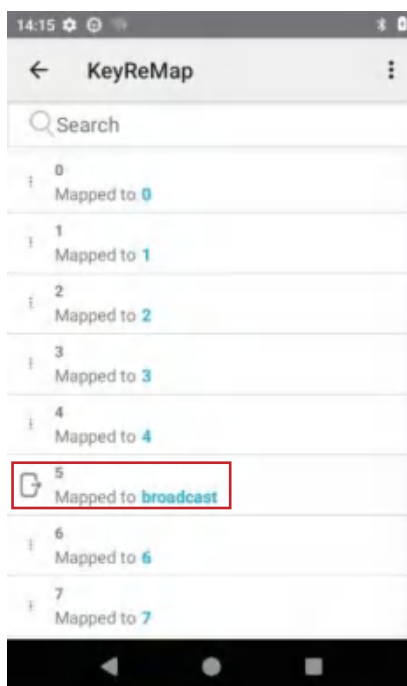


Broadcast Mapping Function 2

Manage key Mappings


Delete key Mapping Settings

Slide a certain option in the list to the left to reset the key to the default settings and clear the key's mapping value;

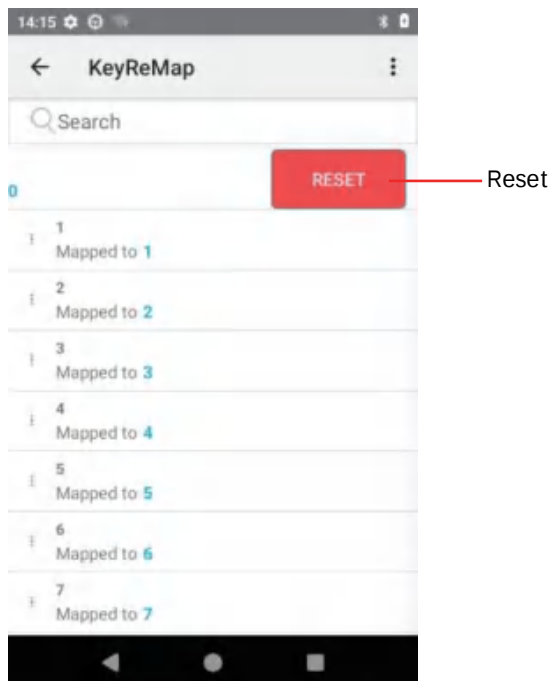

Reset Mapping Key

Touch the menu key at the top right corner to clear the value of each mapped key and restore the default value of each physical key.

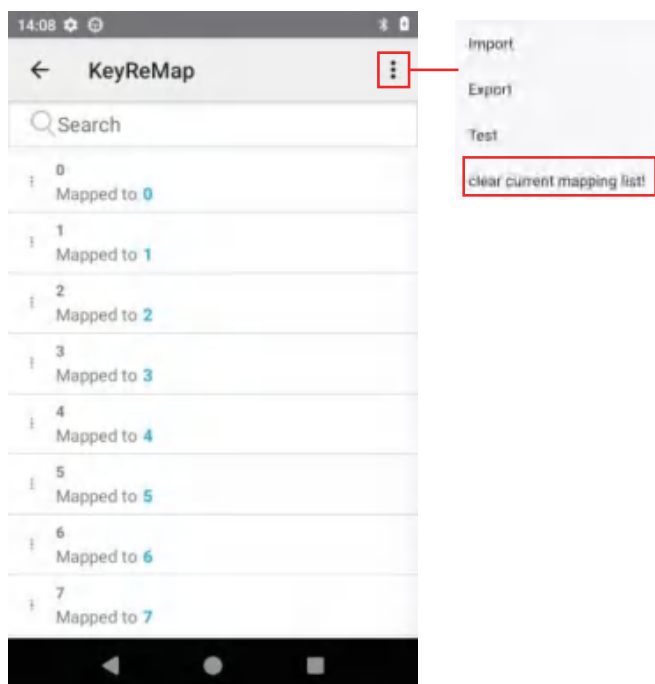

Data Capture

Introduction

ME74 supports data acquisition in the following methods.

- Scan engine decoding.

Scan engine



- 2D scan engine can read various 1D/2D bar codes and 360° read various bar code systems, including the most prevalent linear bar code, postal code, PDF417, QR, DATAMATRIX, etc.
- By scanning techniques, 2D scan engine takes a photo for a bar code, saves the generated image in memory, and executes a top software decoding algorithm to extract bar code data from the image.

Scan Settings

1. **ScanEdge**: can be tested and set, this setting is for the scan head.
2. **Mewedge**: scan settings for a certain application, for example: open continuous scanning in a certain APP, continuous scanning does not work outside this APP, only in the APP.


Method 1-ScanEdge

1. In the home screen, pull up the screen to enter the app center interface, Select ScanEdge.


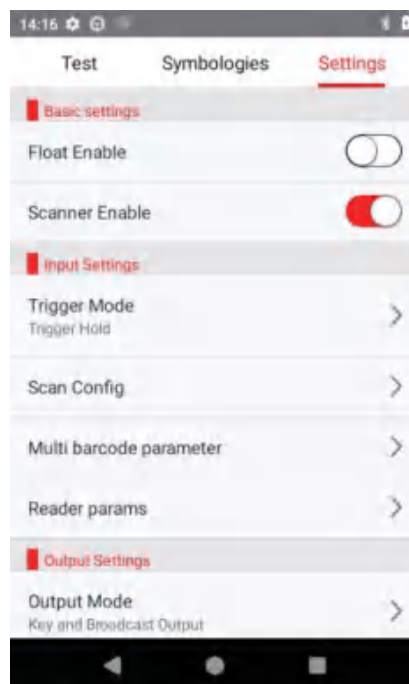
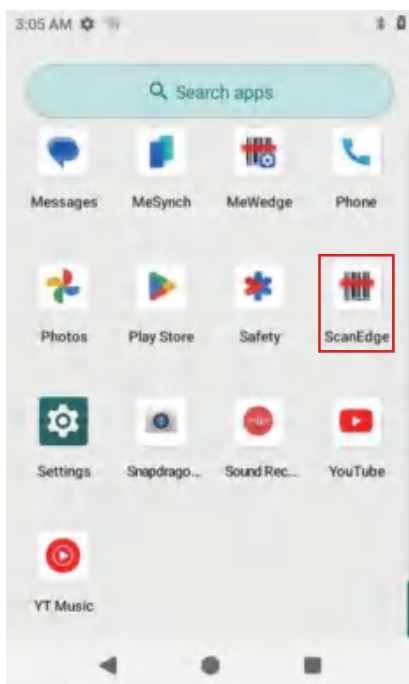


Method 2-Mewedge


1. In the home screen, pull up the screen to enter the app center interface, Select Mewedge.

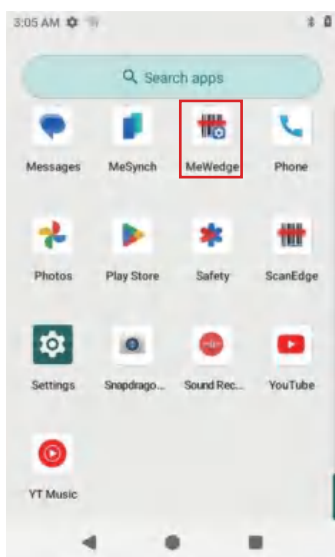

2. Create a new one and select the APP you want to set up.

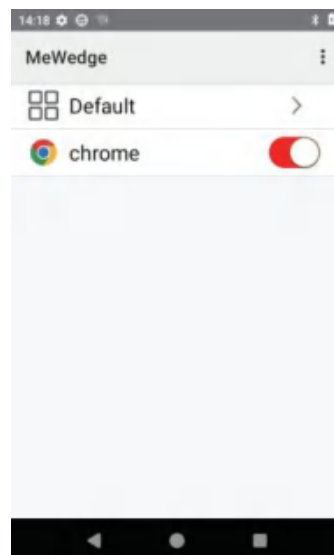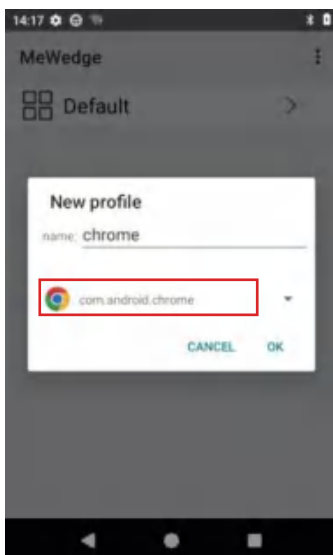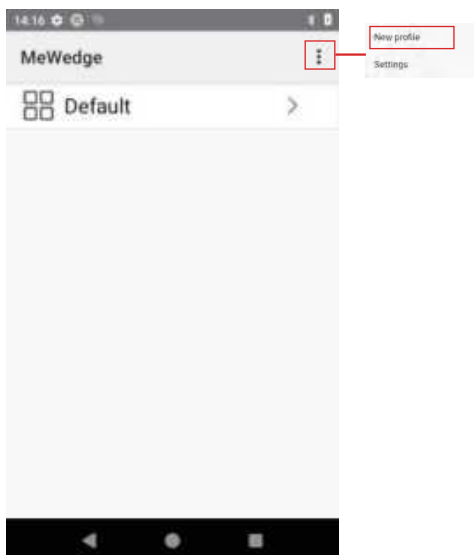


3. Apply scan settings.

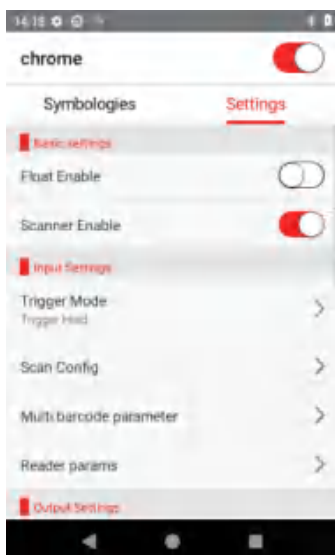

Floating Action Button

Open the virtual key scanning tool on the desktop, which is available for dragging at will and touching to simulate the key scanning function.

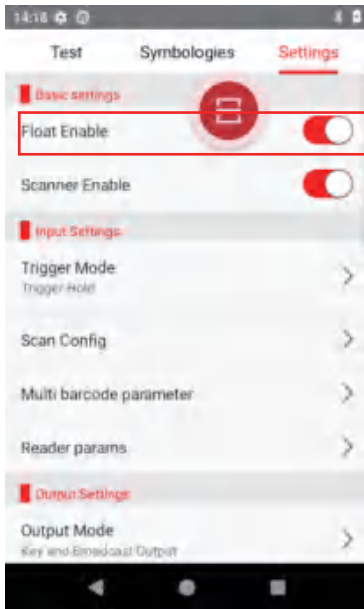


Trigger Mode

Auto mode - manually trigger the scanning function. Press the scanning key and laser light or supplementary light will be shown. The light will not go out until decoding is completed or scanning times out.


Continuous mode - manually trigger the scanning function. In the continuous scanning mode, the scanning laser or supplementary image light will not go out after decoding. Instead, decoding will sustain.

Manual mode - manually trigger the scanning function. Press the scanning key and laser light or supplementary light will be shown. Release the key and the light will go out. In addition, the scanning light will also go out after decoding.

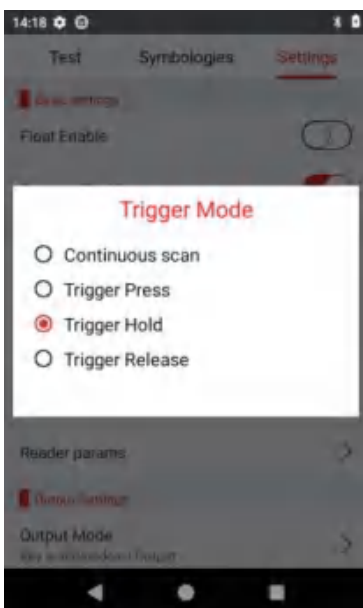


Output Mode

1. Broadcast Output.
2. Key Output.
3. Key and Broadcast Output.

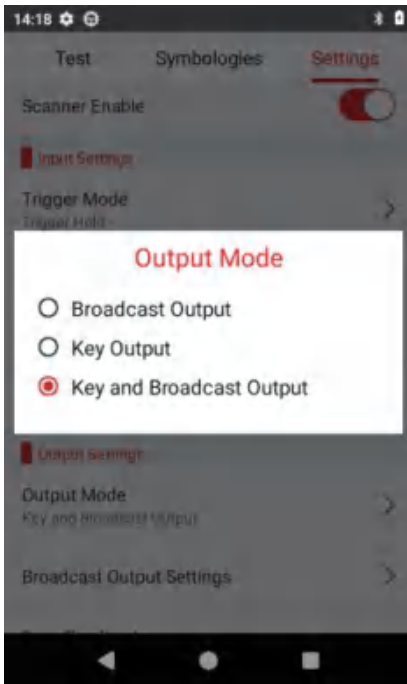


Broadcast Output Settings

Set broadcasting via a corresponding app to receive tag and motion data of the designated broadcast. If the scanned data match the app's broadcast tag and motion (tag and motion are editable), the data will be directly received by the Broadcast Receiver. Any intent transfer value may be separately output or handled in the background.

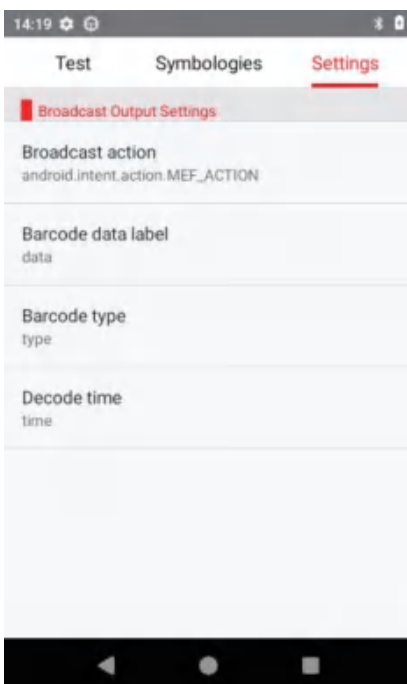

Output by keyboard

Check this mode and the scanning results will be output to the app focus edit box in the foreground by keyboard. Cancel checking this mode and output will be done by broadcast.

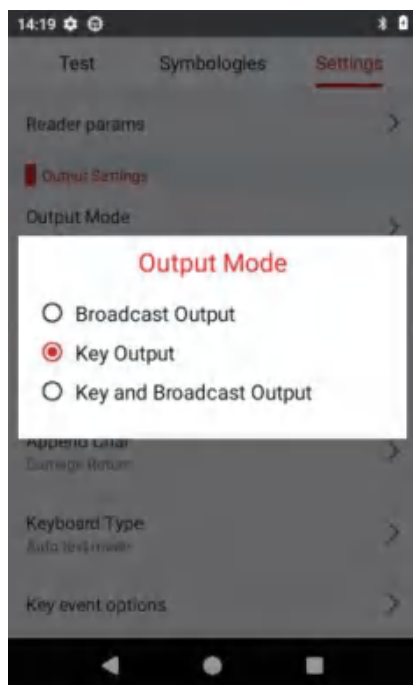


1. Keyboard Type - include Auto text mode, Soft keyboard, always use simulated keystrokes, may result in different scanning results, so please choose with caution.

- Soft keyboard - If a focus input box arises in any app interface in the foreground, it will directly show all the data, otherwise the device will output scanning results character by character through keyboard simulation.
- Auto text mode - the device directly displays all the data in the input box through input method editor simulation.
- Soft keyboard only: the device outputs scanning data through Soft keyboard event simulation at any interface.
- Always Auto text mode: output through any non-Android input box, e.g., webpage or search box.

2. Sound Feedback - set the system's notification tone for scanning, which may be LED, Vibrating or Sound.


3. Append Char - None, Carriage return, Line feed or Tab. Add operational key characters behind scanning results through keyboard simulation.

- None: no operation.
- Carriage return: add an enter behind scanning results through keyboard simulation.
- Line feed: add an OK operation behind scanning results through keyboard simulation.
- Tab: add a Tab key operation behind scanning results through keyboard simulation.

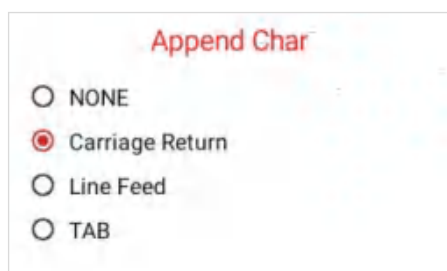


Encode

The encode is UTF-8 by default. This option needs to correspond to the of 2D codes. Any mismatch between the two may lead to code garbling. Please use this function with care.

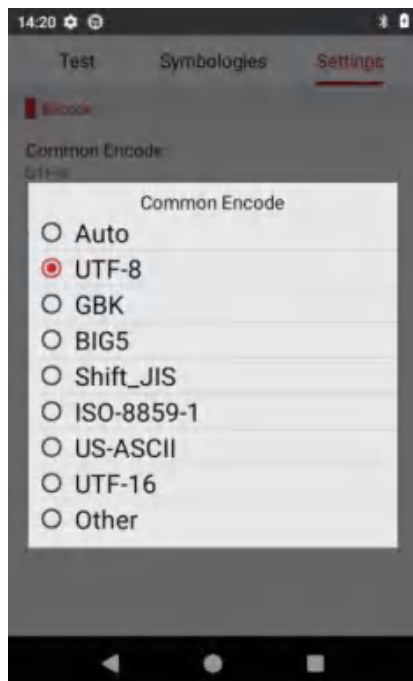

Other settings


- Decode Timeout - laser duration for failing in single scanning, range of 50-60000 ms, 5000 ms by default.
- Repeat Decode Timeout - laser duration for failing in single scanning, range of 50-60000 ms, 3000 ms by default.
- Continue Scan Interval - laser duration for failing in single scanning, range of 0-5000 ms, 50 ms by default.

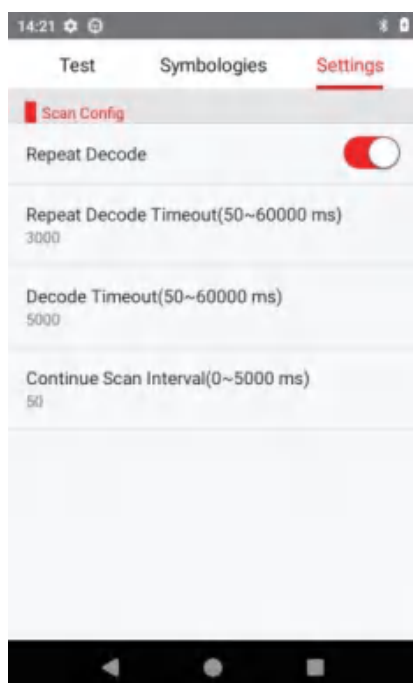

Reader params

Exposure Settings

Different scanning heads vary from each other in the settings. HS7 scan engine is taken as example for illustration.

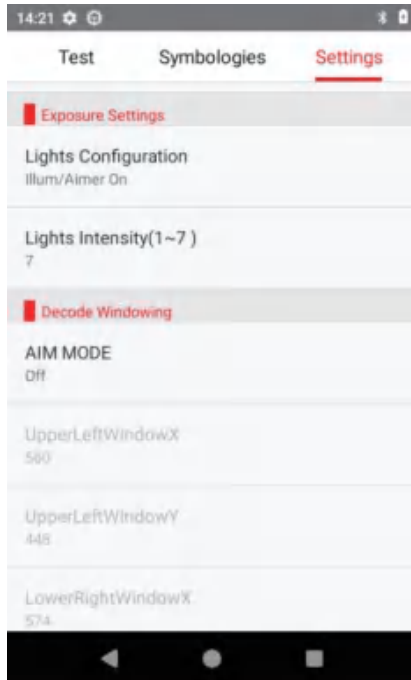


1. Lights Configuration

- Illum/Aimer Off: turn off illumination/aimer light.
- Aim Only: turn on aim light only.
- Illum Only: turn on illumination only.
- Illum/Aimer On: turn on illumination/aimer light.

2. Exposure Mode: auto/fixed. In the auto mode, the scanning head may automatically regulate the exposure value; in the fixed mode, the exposure value can be set.

3. Fixed Exposure: 20~300. The higher the value is, the brighter it will be.

Decoding Windowing

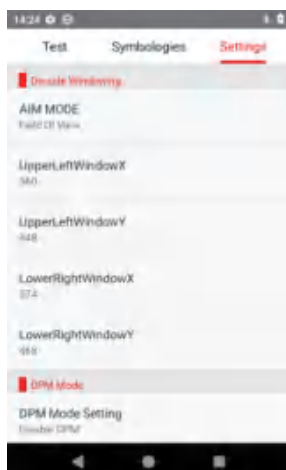


- Configure Windowing - set the range of bar codes from any photo taken.
- Mode Configuration - Off, Around Aimer, or Field of View, Picklist Mode. To fit the view finder, select the Around Aimer mode.
- UpperLeftWindow X.
- UpperLeftWindow Y.
- LowerRightWindow X.
- LowerRightWindow Y.


Data Format

Upon access of bar codes, the system may be available for additional functions: Formatting, Prefix, Suffix, Substitute, App Identifier, or Code Id Type.

1. Tap "Data Format" and select the additional formatting type.
2. Suffix: select the mode and modify the suffix content, e.g.

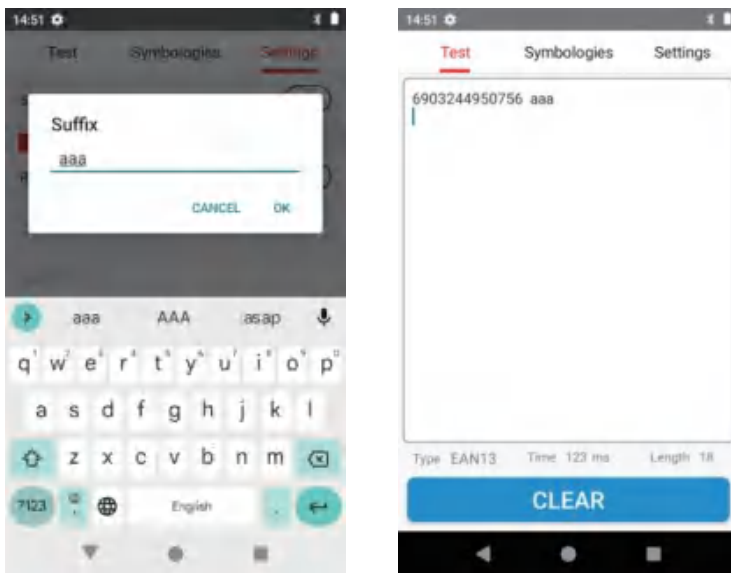


3. Prefix: select the mode and modify the prefix content, e.g.

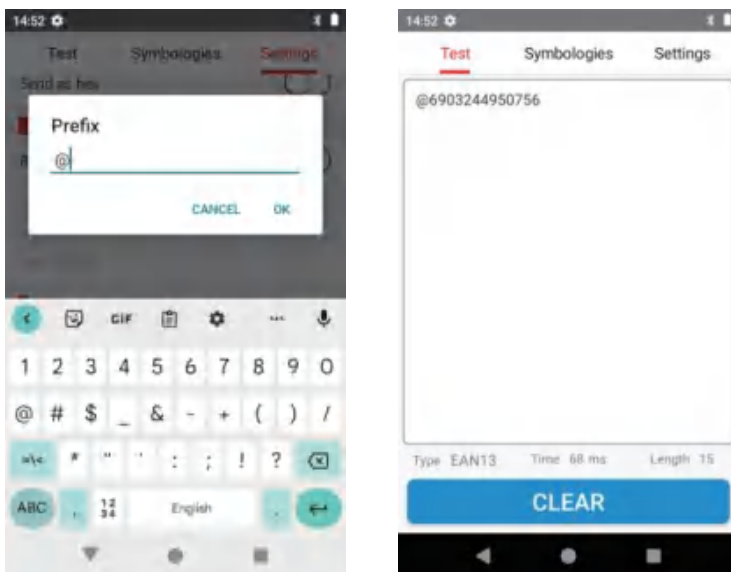


4. Replace: select the mode and modify the former character to be substituted and the substitute character and set the value of the substituted and that of substitute.
5. Application Identifier: select the mode and add an app identifier to some bar codes, e.g., Code 128.
6. App Delimited Identifier: select the mode and set "(" as the app delimited identifier by default, which may be substituted by any other identifier.
7. Code Id Type: select the mode and add a Code Id (Code Id Type None, Code Id Type Aim (add an Aim in front bar codes) or Code Id Type Symbol (add an identifier in front of bar codes)) to some bar codes.

Symbology settings


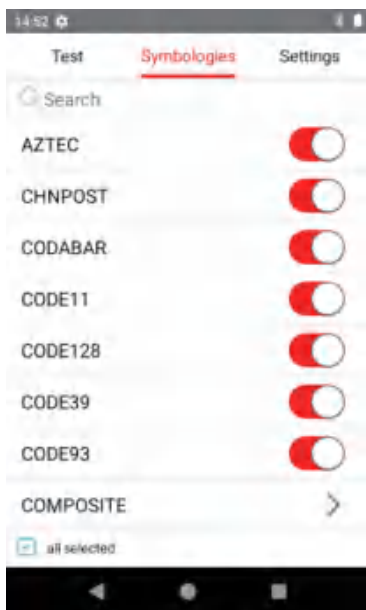


Modify code system type parameters in the list, e.g., bar code length, check bit or transfer character.

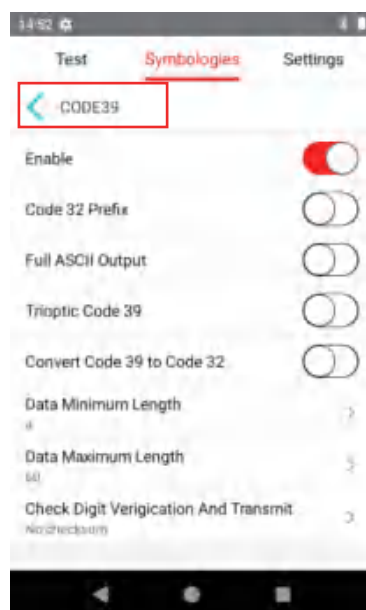


- Enable: enable.
- Data Minimum Length: minimum length.
- Data maximum Length: maximum length.
- Transmit Check Digit: check bit in transfer.

Reset

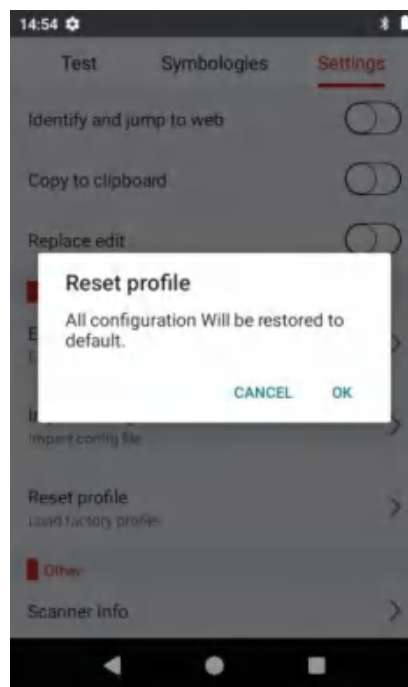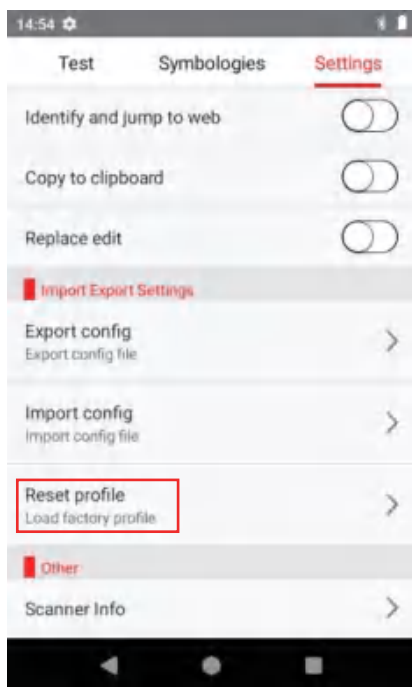

Import config/Export config

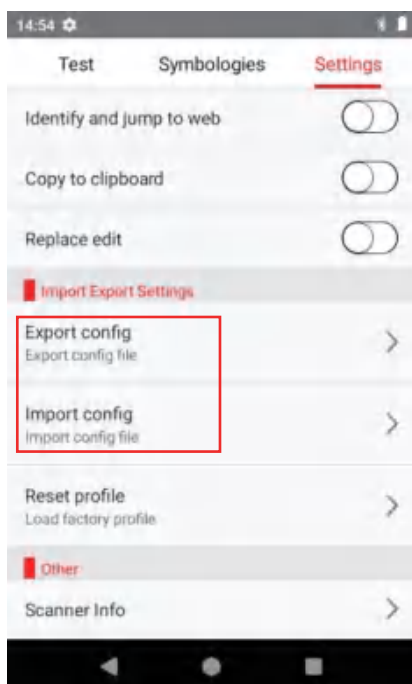

Wireless

WLAN


To enable the WLAN function, please operate as following:

Connect to WLAN


After the wireless function is enabled, ME74 will automatically display all the available wireless networks nearby in the wireless network list. To connect to a certain wireless network, please click the network's SSID in the list and tap Connect.

Note: For some networks, network security key or password needs to be entered for connecting. To connect to such networks, please contact the network admin for corresponding network security keys or passwords.


1. Open Settings - Network & internet or pull down the status bar to enter the quick access panel for operation;

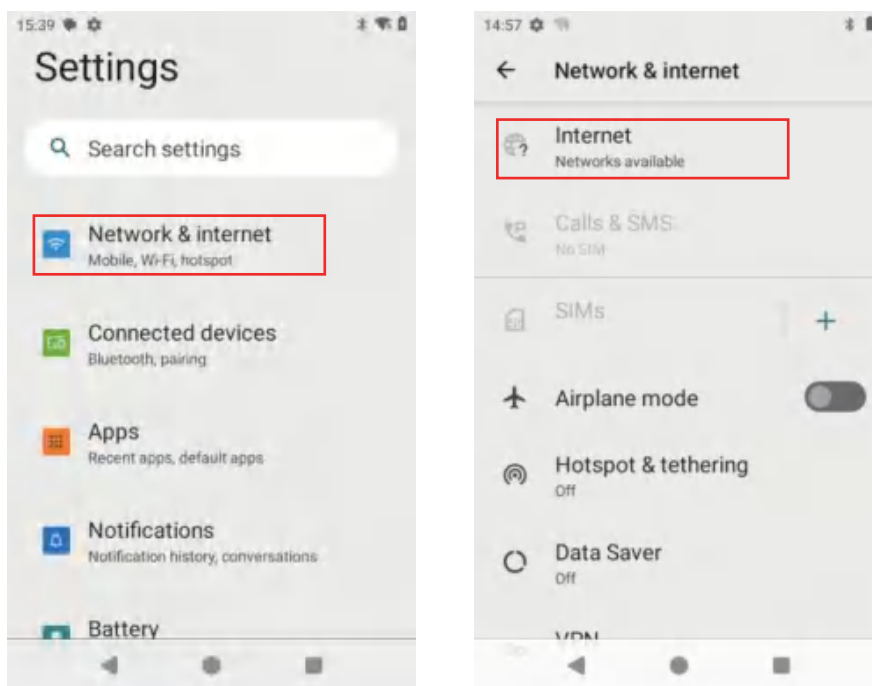


2. Touch to turn on the wifi function.

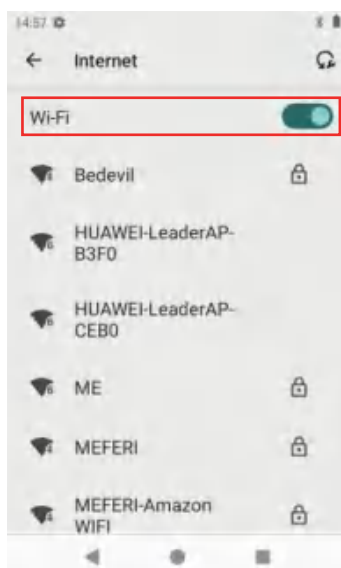


3. Enter the password and tap "✓".

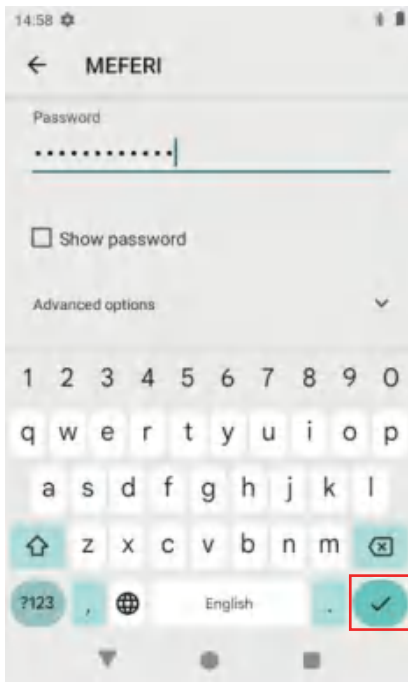

- Check Show Password to display the hotspot password to check whether the password input is wrong.
- Check Advanced Settings for advanced settings, including agent and IP settings.

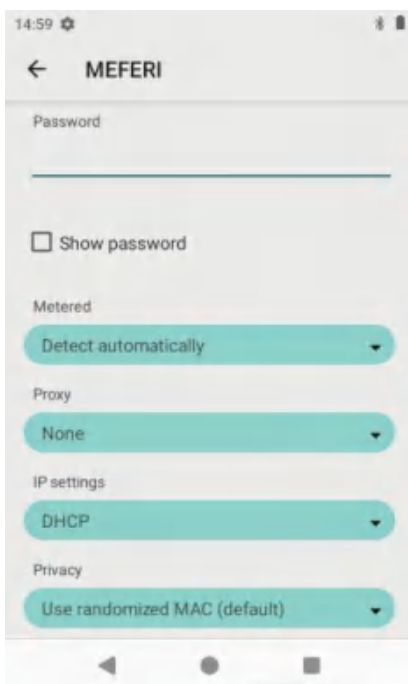


4. Check whether connection is done: 'Connected' indicates that connection is done.

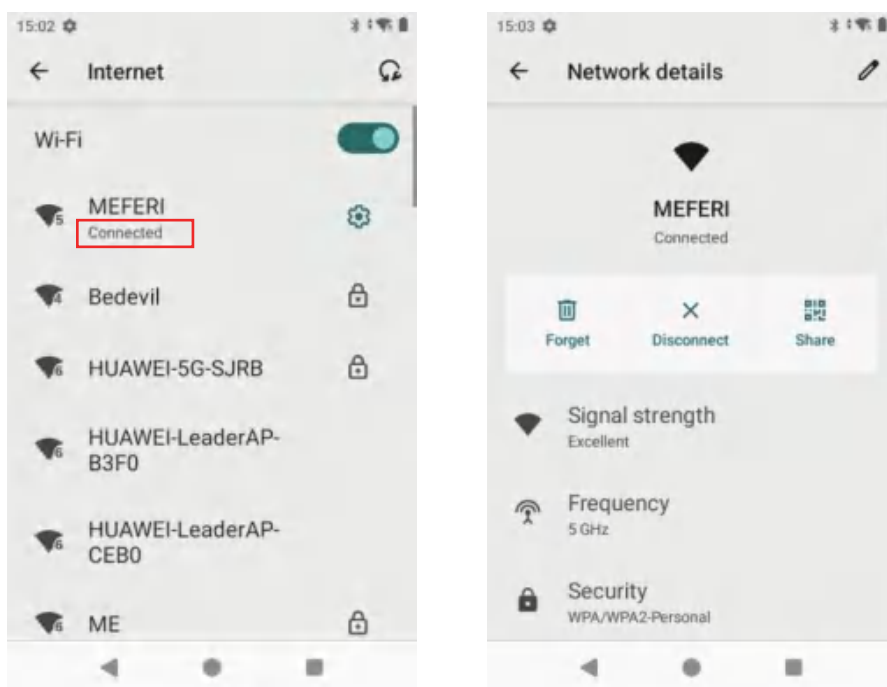

5. WLAN allows indoor wireless communication of ME74. ME74 supports WI-FI in two frequency bands: 2.4G and 6G. WLAN security options support below protocols.


- None
- Enhanced Open
- WEP
- WPA/WPA2-Personal
- WPA3-Personal
- WPA/WPA2-Enterprise
- WPA3-Enterprise
- WPA3-Enterprise 192-bit

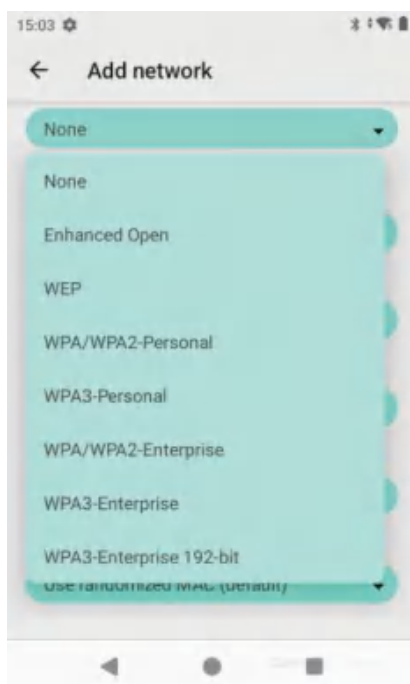


WWAN

Please refer to "Instruction on SIM/TF Card installation" for how to insert a SIM Card.


1. Open "Settings" - "Network & internet" - "SIMs".

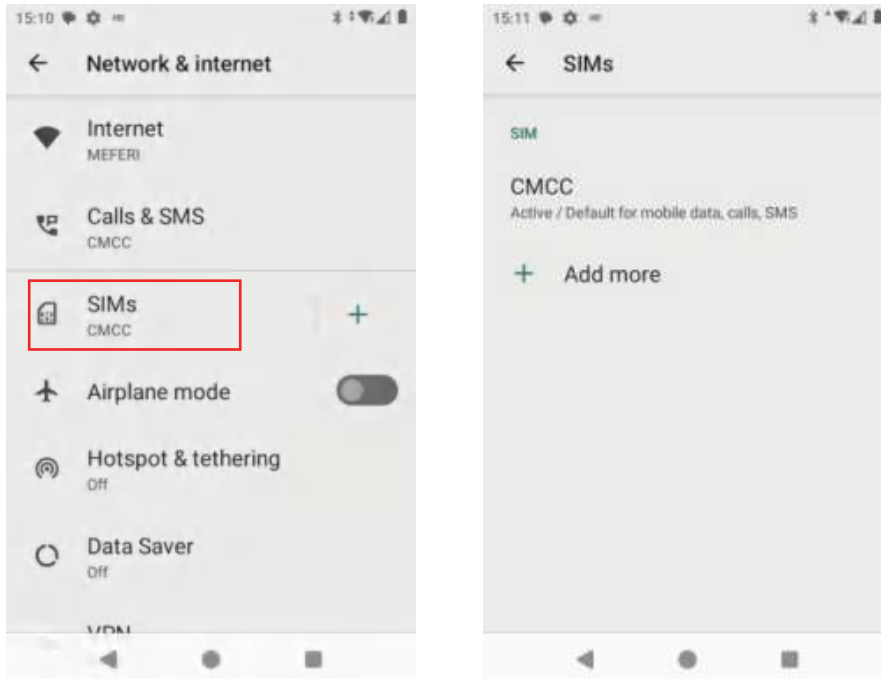


2. Can set the mobile network in conjunction with carrier information settings, such as data on/off, roaming on/off, and access point name, etc.

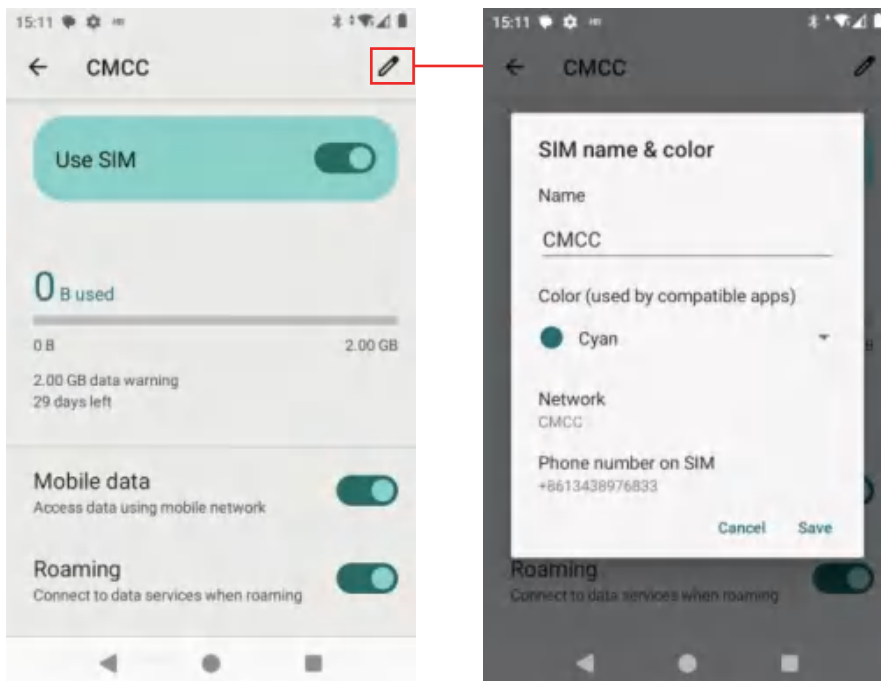

3. Data warning & limits.

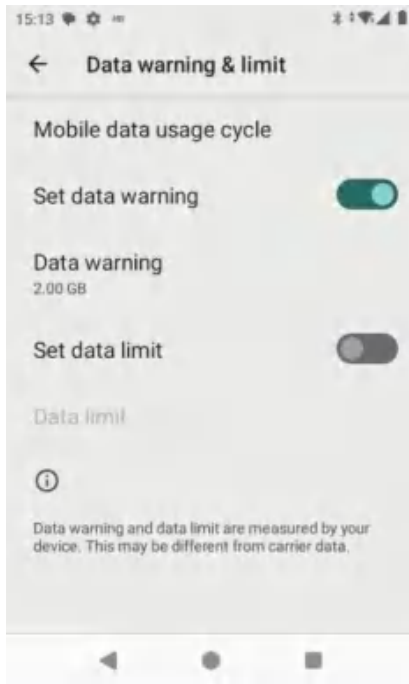

4. Access Point Names.

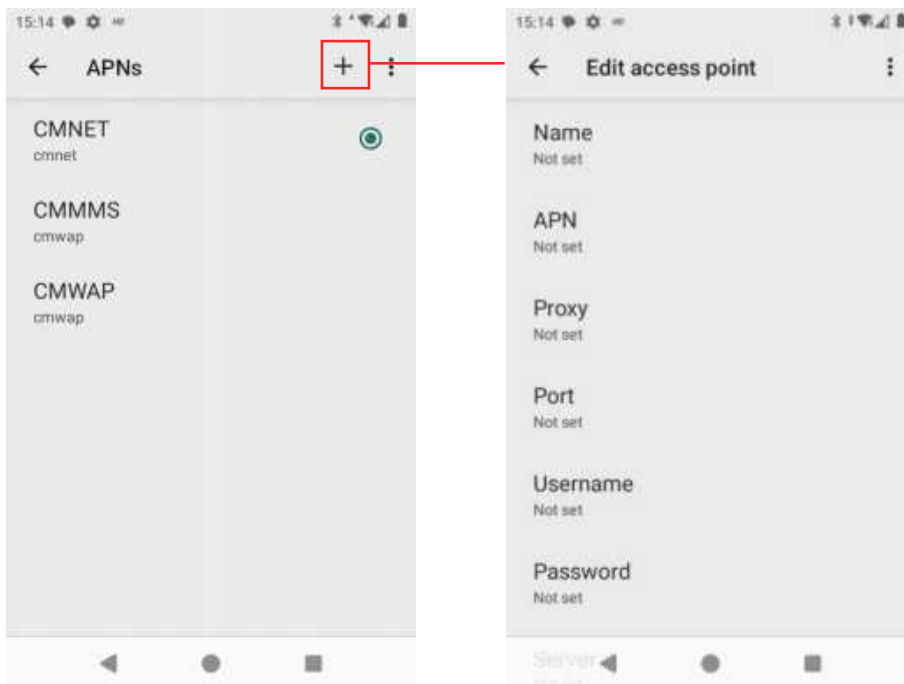

5. ME74 supports a wide range of 5G networks . If failed to connect to WWAN, please follow as below:



- Check local network signal intensity.
- Check whether the SIM Card is correctly installed.
- Check whether the SIM Card has any pending bill, is available for surfing the Internet or damaged (test whether the SIM Card is damaged or has any pending bill by loading the SIM Card in the device).

- Check whether the access point is correctly set.

Bluetooth


Any device with Bluetooth is available for wireless communication to transmit and receive data by wireless radio frequency (2.4 GHz).

Device with the Bluetooth function such as printer, access point and other mobile computer can exchange data (e.g., file, date or task) after turning on the Bluetooth function.



ME74 supports BLE (Bluetooth low energy). BLE is oriented to healthcare, health, safety and home entertainment apps. It remains a standard Bluetooth coverage while reducing power consumption and saving cost.

1. Pull down the status bar and long press the Bluetooth icon or click "Settings" - "Connected devices" to enter the page.

Method 1

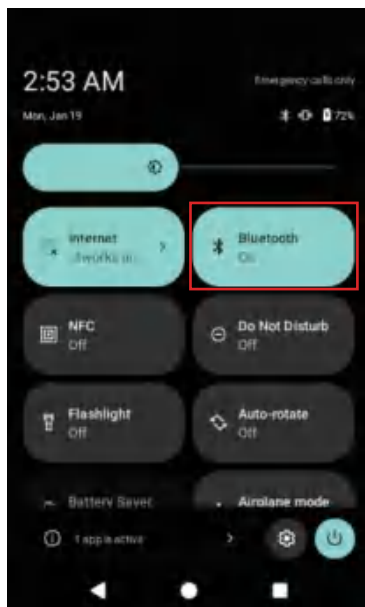


Method 2

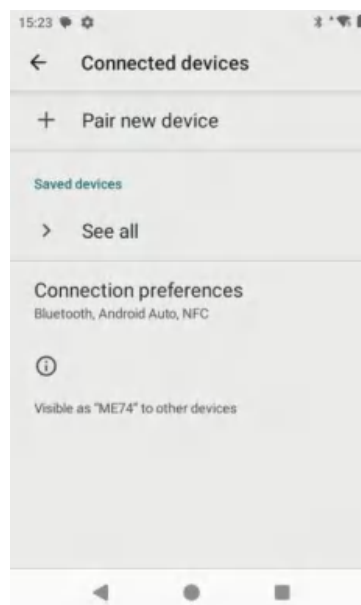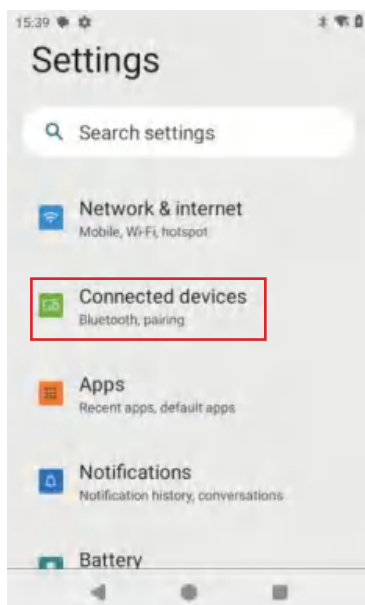


Change Bluetooth device name

1. Click Pair new device.

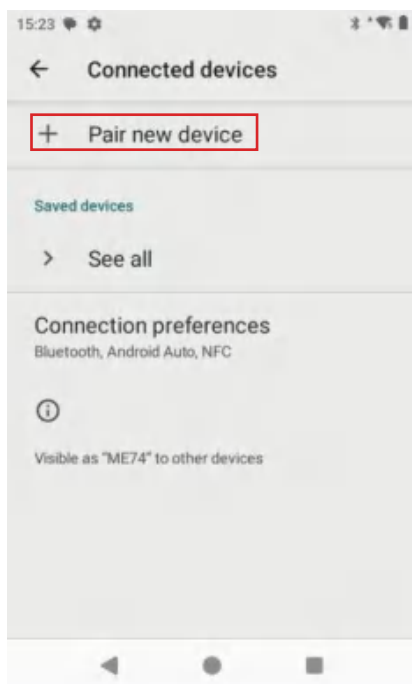


2. Tap Device name can change visible name to another.

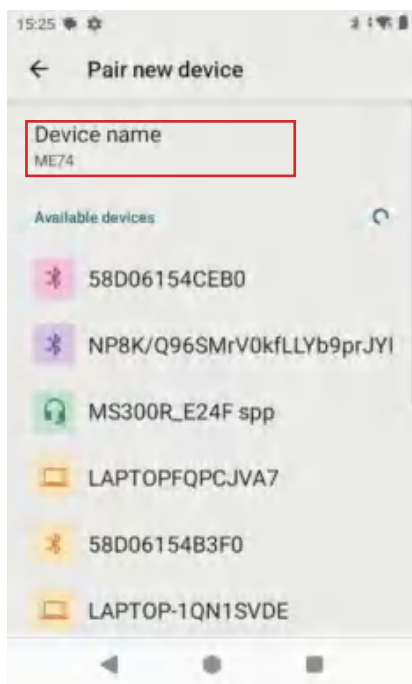


Bluetooth connection

1. Tap Pair new device to search for Bluetooth devices nearby.

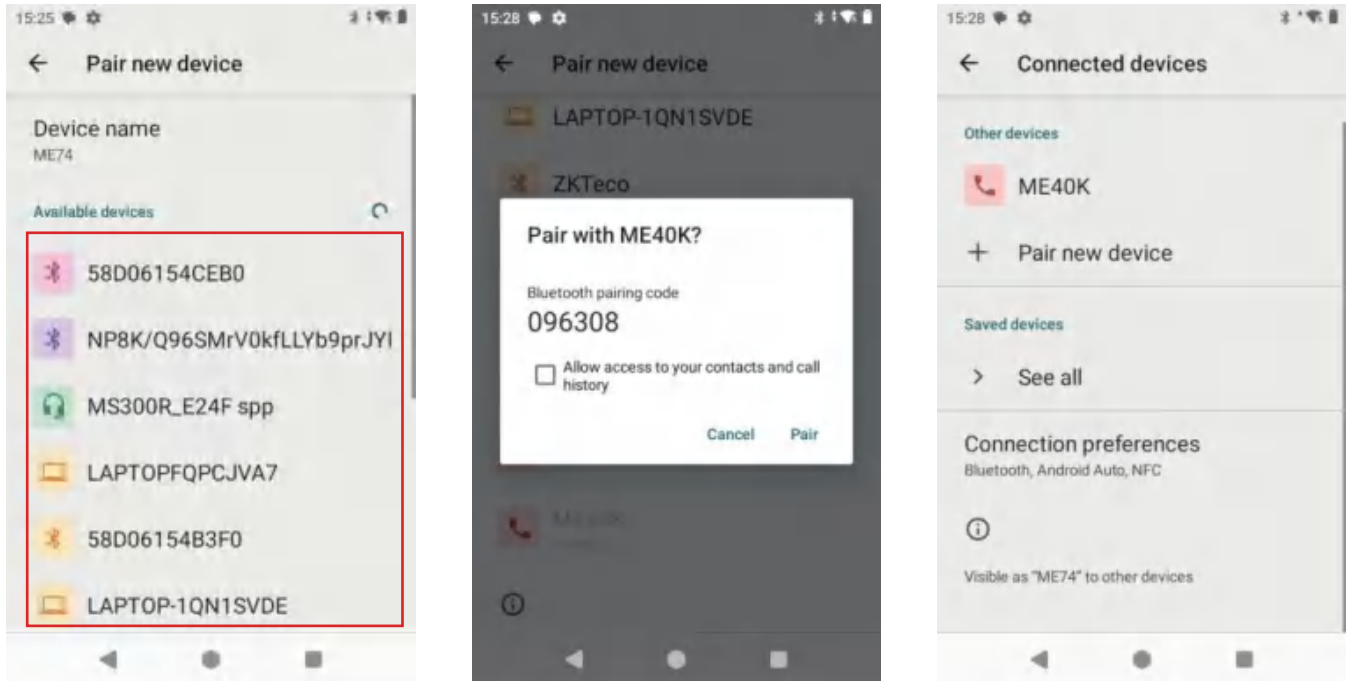



Management paired devices

1. Click the previously connected device settings icon.
2. Can perform management operations such as "forget" and "connect" on previously connected devices.

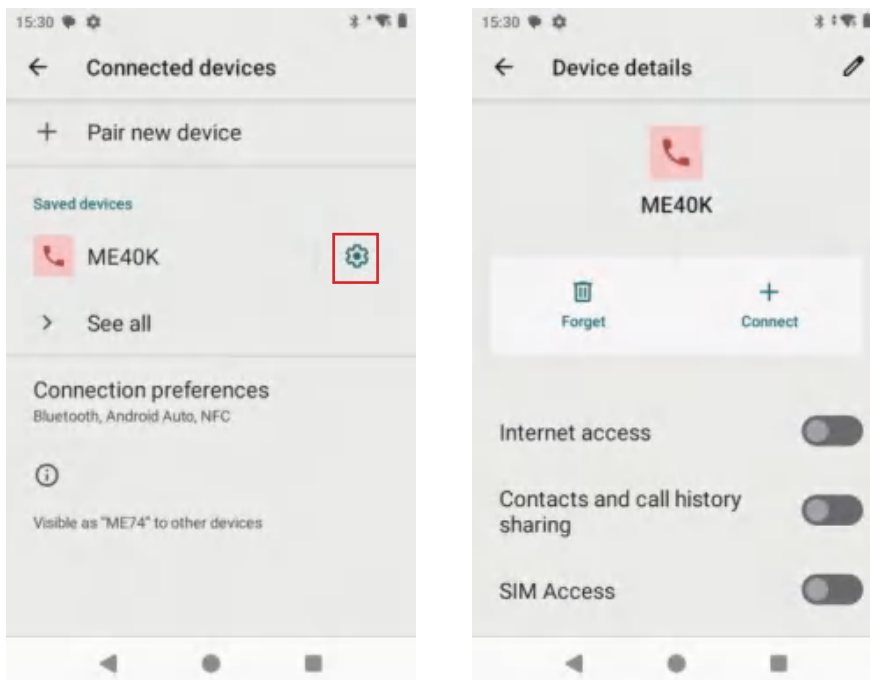

Connection preferences

1. Set up Bluetooth, NFC, etc.

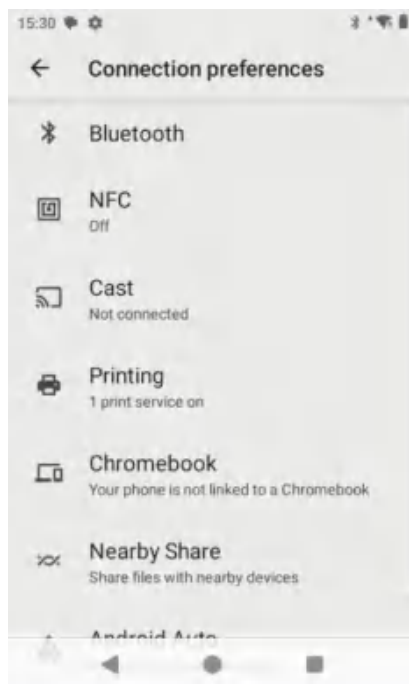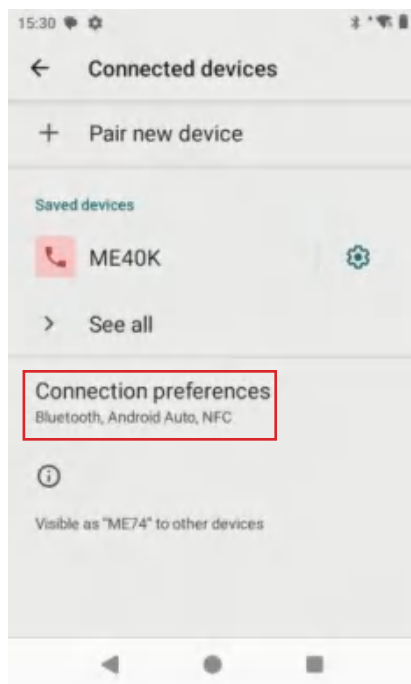

Accessories

Introduction

This chapter describes ME74 accessories.

List of Standard Accessories



USB Type-C Cable

- Support Charging and Data Transferring.
- USB 2.0 Port: OTG, Type-C.
- Length: 1m.



Battery

- Standard 6000 mAh, Rated voltage: 4.35V



Hand Strap

- Protects the device from falling



Power Adapter

- Input: 100-240V 50/60Hz 0.6A.
- Output: 9.0V—2.0A
- ME74: 9V/2A Quick Charge.

List of Optional Accessories



Single Slot Cradle

- Data exchange with PC and charging
- Extra Battery Slot



PowerAdapter

- 12V2A Adaptor used for Single-slot Cradle



4-Slot Battery Charger

- Simultaneous charging
- Charge status LED indication



Power Adapter

- 12V4A Adaptor used for 4-Slots Battery Charger



8-Slot Battery Charger

- Simultaneous charging.
- Charge status LED indication.

List of Optional Accessories



Power Adapter

- Plug Adaptor 12V5A
- Plug Cable 100-240V



20-Slot Battery Charger

- Simultaneous charging
- Charge status LED indication



Power Adapter

- Plug Adaptor 24V10A
- Plug Cable 100-240V



5-Slot Cradle

- Data exchange with PC and charging
- Extra Battery Slots



Power Adapter

- Plug Adaptor 24V5A
- Plug Cable 100-240V

List of Optional Accessories



Low-temperature Battery

- Low-temperature Battery 5200 mAh
- Rated voltage: 4.35V



Pistol Grip

- Additional comfort and accuracy when scanning



Pistol Grip Hand Strap

- For Pistol Grip



Shoulder Bag

- Prevents falls and loss of the device
- Compatible with brick ME74



Holster (for Gun)

- Prevents falls and loss of the device
- Compatible with gun ME74

List of Optional Accessories



Screen Protector(Glass)

- Additional protection against scratches and damage

Maintenance and Troubleshooting

Introduction

This chapter sets forth the device's maintenance methods and troubleshooting solutions to help users use the product appropriately.

Maintenance

To ensure that the device does not break down, please abide by the following instructions while using ME74:

- Do not scratch the screen of ME74. While using ME74, please use a recognized touch pen or any other pen which is fit for touching with point made from plastics. Please do not use a real pen, pencil or anything sharp to touch the screen of ME74.
- The screen of ME74 is made from glass. So please do not make ME74 fall on the ground or get hit.
- Prevent ME74 from bearing too high or low temperature. Do not put the device on any automotive instrument panel in hot weather. Keep it away from any heat source.
- Do not use ME74 anywhere dusty, damp or moist.
- Clean the scanning head and camera of ME74 by soft lens cloth. If the screen of ME74 gets dirty, please clean the screen by soft cloth with diluted glass cleaning solution.

ME74 cleaning

Housing

Scrub the housing by cloth with alcohol, including keys.

Display screen

Scrub the display screen by alcohol wipes but be sure that no liquid drops nearby the edge of the display. Immediately dry the display screen by soft and abrasive-free cloth to prevent mark left.

Camera and scanning window

Please scrub the camera and scanning window by lens wipers or other materials made for cleaning optical materials (e.g., glasses).

Troubleshooting

ME74 troubleshooting.

Problem	Reason	Solution
Press the power key but ME74 does not work.	The battery is not charged.	Charge the battery in ME74.
	The system crashes.	Execute resetting.
The battery is not charged.	The battery breaks down.	Replace the battery.
	The battery's temperature is exceptional.	Contact for technical support.
During data communication via Wi-Fi, no data are transferred or not all data are transferred.	Wi-Fi communication is not enabled.	Turn on Wi-Fi communication.
	The device is out of the range of the access point.	Move closer to the access point.
During data communication via Bluetooth, no data are transferred or not all data are transferred.	Bluetooth communication is not enabled.	Turn on Bluetooth communication.
	The device is out of the signal range of another Bluetooth device.	Move within 10m (32.8ft) range of another device.
No sound.	Volume setting is too low or turned off.	Adjust volume.
ME74 is off.	ME74 is at inactive state.	Not use for a while, the display will automatically turn off. Set the duration to be longer, such as 15 s, 30 s, 1 min, 2 min, 5 min, 10 min or 30 min.
	The device runs out of battery.	Charge the battery.
Tapping a window button or icon but fail to trigger the corresponding function.	The device does not respond.	Reset the device.
A message pops up, indicating that ME74's storage is full.	Too many files are saved in ME74.	Delete unused memos and records. If necessary, save such records in the host (or use SD Card as additional memory).
	Too many apps are installed in ME74.	Uninstall unused apps in ME74 to recover storage capacity.
ME74 fails to decode while reading a bar code.	The bar code is unreadable.	Check the barcode is not damaged.
	The distance between the laser scanning window and bar code is wrong.	Put ME74 within proper scanning range.
	Battery low.	Check battery capacity.