






CIAO 3-Slot Cradle Quick Start Guide

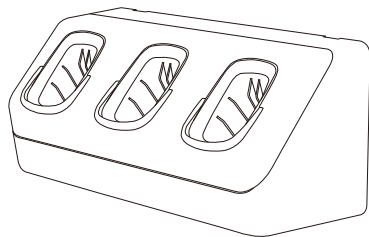

Overview



Front



Back

Instruction manual

1. Charging mode

a) Connect the 12V/10A charger terminal to the charging port on the back of the CIAO 3-Slot Cradle. Upon connection, the three status indicators on the CIAO 3-Slot Cradle will light up simultaneously, indicating that the 12V/10A charger is successfully connected.

Installation Instructions – CIAO 3-Slot Cradle (Wall-Mount)


1. Prepare Mounting Holes

Refer to the mounting hole reference diagram and install four screws to support the wall-mounted CIAO 3-Slot Cradle. Leave approximately 3 mm between the screw head and the wall to allow the cradle to hang securely.





If required, drill 1–2 circular holes behind each CIAO 3-Slot Cradle for routing the power cable through the wall.

2. Recommended Vertical Spacing

The recommended vertical distance between two stacked cradles is 120mm.

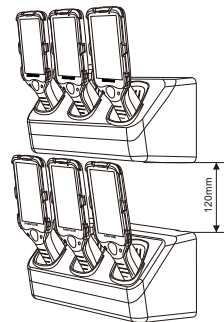


The attached diagram illustrates the mounting hole reference layout when using a 120 mm spacing.

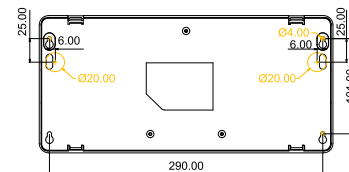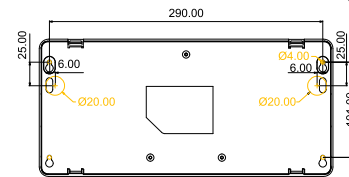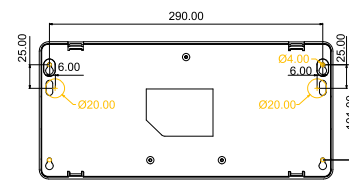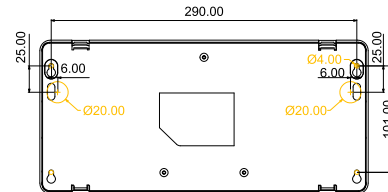

3. Cable Routing & Mounting


Route the CIAO 3-Slot Cradle's power cable through a Ø20 mm cable hole, connect the cable to the power adapter behind the wall, and then hang the CIAO 3-Slot Cradle onto the pre-installed screws.

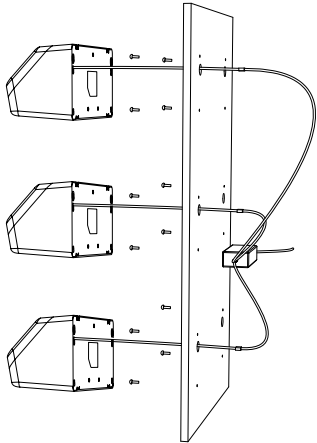

4. (Optional) Anti-Movement Bracket Installation



Optionally, place the positioning stopper at the center top edge of the CIAO 3-Slot Cradle to ensure proper alignment. Once the bottom of the stopper is flush with the cradle's top surface, secure it to the wall using self-tapping screws.

(This accessory is only required when additional reinforcement is desired.)

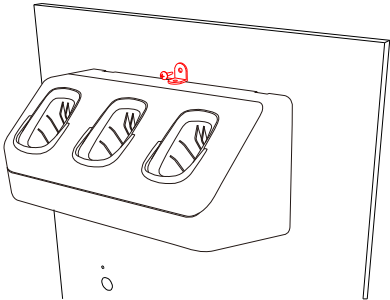


Screw Specification (If not using the supplied screws)

If alternative screws are used, ensure they are M4 screws with a head diameter greater than 5 mm and less than 7.5 mm.

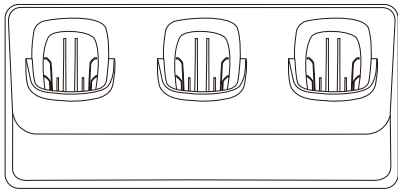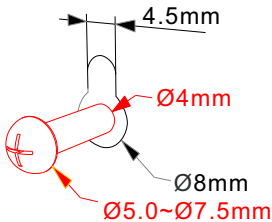

- b) Charging the CIAO Device:
- Insert the CIAO device into the bracket slot. The CIAO will then enter the charging state.
 - The status indicator on the CIAO will light up while charging. It shows red when not fully charged and turns green once fully charged.

Note: The 12V/10A charger has three terminals and can support simultaneous charging of up to three CIAO 3-Slot Cradles.

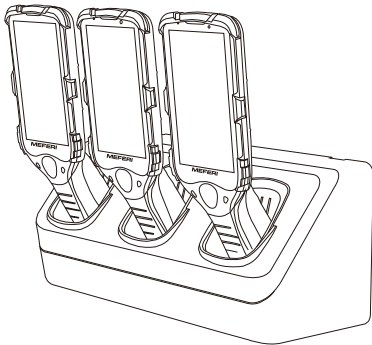


2. Electronic Lock Function:


- a) Locking Process:
- When the CIAO device is inserted into a slot of the CIAO 3-Slot Cradle for charging, the cradle automatically engages a safety lock, securing the CIAO device within the charger.

- b) Unlocking Process:
- To remove the CIAO device, it must be manually unlocked using the application on the device.

- c) Steps to Unlock:
- Open the Serial Tools application on the CIAO device and navigate to the "CRADLE Unlock" function module.
 - Click on "Unlock Cradle" to disengage the lock.

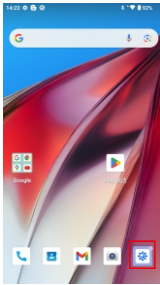

Unlock step 2: Click Unlock Cradle

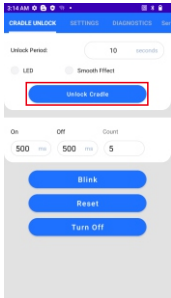

Unlock Completion:
After receiving the unlock command, the status indicator on the CIAO 3-Slot Cradle will flash as a warning. The charged CIAO device can then